

# Selectable Output Horns, Strobes, and Horn/Strobes

SpectrAlert\* Advance selectable-output horns, strobes, and horn/strobes are rich with features guaranteed to cut installation times and maximize profits.











### **Features**

- Electrically compatible with existing SpectrAlert products
- Automatic selection of 12- or 24-volt operation at 15 and 15/75 candela
- Plug-in design
- Field selectable candela settings on wall and ceiling units: 15, 15/75, 30, 75, 95, 110, 115, 135, 150, 177, 185
- Same mounting plate for wall- and ceiling-mount units
- Shorting spring on mounting plate for continuity check before installation
- Tamper resistant construction
- Outdoor wall and ceiling products rated from -40°F to 151°F
- Design allows minimal intrusion into the back box
- Horn rated at 88+ dbA at 16 volts
- Rotary switch for horn tone and three volume selections
- Outdoor products UL listed to UL 1638 (strobe) and UL 464 (horn) outdoor requirements
- Outdoor products NEMA 4X rated
- Compatible with MDL sync module

# **Agency Listings**









**The SpectrAlert Advance series** of notification appliances is designed to simplify installations, with features such as plug in designs, instant feedback messages to ensure correct installation of individual devices, and 11 field-selectable candela settings for wall and ceiling strobes and horn/strobes.

When installing Advance products, first attach a universal mounting plate to a four-inch square, four-inch octagon or double-gang junction box. The two-wire mounting plate attaches to a single-gang junction box.

Next, connect the notification appliance circuit wiring to the SEMS terminals on the mounting plate.

Finally, attach the horn, strobe or horn/strobe to the mounting plate by inserting the product's tabs in the mounting plate's grooves. The device will rotate into position, locking the product's pins into the mounting plate's terminals. The device will temporarily hold in place with a catch until it is secured with a captured mounting screw.

The SpectrAlert Advance series includes outdoor notification appliances. Outdoor strobes and horn/strobes (two wire and four wire) are available for wall or ceiling. Outdoor horns are available for wall only. All System Sensor outdoor products are rated between minus 40 degrees Fahrenheit and 151 degrees Fahrenheit in wet or dry applications.

## **SpectrAlert Advance Specifications**

#### **Architect/Engineer Specifications**

#### General

SpectrAlert Advance horns, strobes and horn/strobes shall mount to a standard  $4 \times 4 \times 1\frac{1}{2}$ -inch back box, 4-inch octagon back box or double-gang back box. Two-wire products shall also mount to a single-gang  $2 \times 4 \times 1\frac{1}{2}$ -inch back box. A universal mounting plate shall be used for mounting ceiling and wall products. The notification appliance circuit wiring shall terminate at the universal mounting plate. Also, SpectrAlert Advance products, when used with the Sync-Circuit<sup>™</sup> Module accessory, shall be powered from a non-coded notification appliance circuit output and shall operate on a nominal 12 or 24 volts. When used with the Sync-Circuit Module, 12-volt rated notification appliance circuit outputs shall operate between 17 ond 33 volts. Indoor SpectrAlert Advance products shall operate between 32 and 120 degrees Fahrenheit from a regulated DC, or full-wave rectified, unfiltered power supply. Strobes and horn/strobes shall have field-selectable candela settings including 15, 15/75, 30, 75, 95, 110, 115, 135, 150, 177, 185.

#### Strobe

The strobe shall be a System Sensor SpectrAlert Advance Model \_\_\_\_\_\_ listed to UL 1971 and shall be approved for fire protective service. The strobe shall be wired as a primary-signaling notification appliance and comply with the Americans with Disabilities Act requirements for visible signaling appliances, flashing at 1Hz over the strobe's entire operating voltage range. The strobe light shall consist of a xenon flash tube and associated lens/reflector system.

#### Horn/Strobe Combination

The horn/strobe shall be a System Sensor SpectrAlert Advance Model \_\_\_\_\_\_\_ listed to UL 1971 and UL 464 and shall be approved for fire protective service. The horn/strobe shall be wired as a primary-signaling notification appliance and comply with the Americans with Disabilities Act requirements for visible signaling appliances, flashing at 1Hz over the strobe's entire operating voltage range. The strobe light shall consist of a xenon flash tube and associated lens/reflector system. The horn shall have three audibility options and an option to switch between a temporal three-pattern and a non-temporal (continuous) pattern. These options are set by a multiple position switch. On four-wire products, the strobe shall be powered independently of the sounder. The horn on horn/strobe models shall operate on a coded or non-coded power supply.

#### **Outdoor Products**

SpectrAlert Advance outdoor horns, strobes and horn/strobes shall be listed for outdoor use by UL and shall operate between minus 40 degrees and 151 degrees Fahrenheit. The products shall be listed for use with a System Sensor outdoor/weatherproof back box with half inch and three-fourths inch conduit entries

#### **Synchronization Module**

The module shall be a System Sensor Sync-Circuit model MDL listed to UL 464 and shall be approved for fire protective service. The module shall synchronize SpectrAlert strobes at 1Hz and horns at temporal three. Also, while operating the strobes, the module shall silence the horns on horn/strobe models over a single pair of wires. The module shall mount to a 411/16 × 21/8-inch back box. The module shall also control two Style Y (class B) circuits or one Style Z (class A) circuit. The module shall synchronize multiple zones. Daisy chaining two or more synchronization modules together will synchronize all the zones they control. The module shall not operate on a coded power supply.

Physical/Electrical Specifications	
Standard Operating Temperature	32°F to 120°F (0°C to 49°C)
K Series Operating Temperature	-40°F to 151°F (-40°C to 66°C)
Humidity Range	10 to 93% non-condensing (indoor products)
Strobe Flash Rate	1 flash per second
Nominal Voltage	Regulated 12DC/FWR or regulated 24DC/FWR <sup>1</sup>
Operating Voltage Range <sup>2</sup>	8 to 17.5 V (12V nominal) or 16 to 33 V (24 nominal)
Input terminal wire gauge	12 to 18 AWG
Ceiling mount dimensions (including lens)	$6.8$ diameter $\times 2.5$ high (173 mm diameter $\times 64$ mm high)
Wall mount dimensions (including lens)	$5.6$ L $\times$ $4.7$ W $\times$ $2.5$ D (142 mm L $\times$ 119 mm W $\times$ 64 mm D)
Horn dimensions	$5.6$ L $\times$ $4.7$ W $\times$ $1.3$ D (142 mm L $\times$ 119 mm W $\times$ 33 mm D)
Wall-mount back box skirt dimensions (BBS-2, BBSW-2)	$5.9^{\circ}L \times 5.0^{\circ}W \times 2.2^{\circ}D$ (151 mm L × 128 mm W × 56 mm D)
Ceiling-mount back box skirt dimensions (BBSC-2, BBSCW-2)	7.1" diameter $\times$ 2.25" high (180 mm diameter $\times$ 57 mm high)
Wall-mount weatherproof back box dimensions (SA-WBB)	$5.7^{\circ}L \times 5.1^{\circ}W \times 2.0^{\circ}D$ (145 mm L × 130 mm W × 51 mm D)
Ceiling-mount weatherproof back box dimensions (SA-WBBC)	7.1" diameter $\times$ 2.0" high (180 mm diameter $\times$ 51 mm high)
Wall-mount trim ring dimensions (TR-HS, TRW-HS)	$5.7$ "L $\times$ $4.812$ "W $\times$ $0.35$ "D (146 mm L $\times$ 122 W mm $\times$ 9 D mm)
Ceiling-mount trim ring dimensions (TRC-HS, TRCW-HS)	$6.9$ diameter $\times$ 0.35 high (176 mm diameter $\times$ 9 mm high)

#### Notes:

- 1. Full Wave Rectified (FWR) voltage is a non-regulated, time varying power source that is used on some power supply and panel outputs.
- 2. P, S, PC, and SC products will operate at 12 V nominal only for 15 and 15/75 cd.

## **UL Current Draw Data**

UL Max. Strobe Current Draw (mA RMS)					
		8–17.5	Volts	16-33\	/olts
	Candela	DC	FWR	DC	FWR
Standard	15*	123	128	66	71
Candela Range	15/75*	142	148	77	81
	30*	NA	NA	94	96
	75*	NA	NA	158	153
	95*	NA	NA	181	176
	110	NA	NA	202	195
	115	NA	NA	210	205
High	135	NA	NA	228	207
Candela Range	150	NA	NA	246	220
	177	NA	NA	281	251
	185	NA	NA	286	258

		8-17.5	Volts	16-33 Volts		
Sound Pattern	dB	DC	FWR	DC	FWR	
Temporal	High	57	55	69	75	
Temporal	Medium	44	49	58	69	
Temporal	Low	38	44	44	48	
Non-temporal	High	57	56	69	75	
Non-temporal	Medium	42	50	60	69	
Non-temporal	Low	41	44	50	50	
Coded	High	57	55	69	75	
Coded	Medium	44	51	56	69	
Coded	Low	40	46	52	50	

UL Max. Current Draw (m/	A RMS), 2-wir	e Horn/Strobe	, Standard (	Candela Range	(15–115 cd	)			
	8–17.5 \	/olts	16-33 V	'olts					
DC Input	15	15/75	15	15/75	30	75	95	110	115
Temporal High	137	147	79	90	107	176	194	212	218
Temporal Medium	132	144	69	80	97	157	182	201	210
Temporal Low	132	143	66	77	93	154	179	198	207
Non-temporal High	141	152	91	100	116	176	201	221	229
Non-temporal Medium	133	145	75	85	102	163	187	207	216
Non-temporal Low	131	144	68	79	96	156	182	201	210
FWR Input									
Temporal High	136	155	88	97	112	168	190	210	218
Temporal Medium	129	152	78	88	103	160	184	202	206
Temporal Low	129	151	76	86	101	160	184	194	201
Non-temporal High	142	161	103	112	126	181	203	221	229
Non-temporal Medium	134	155	85	95	110	166	189	208	216
Non-temporal Low	132	154	80	90	105	161	184	202	211

	olts/				16-33 Volts				
DC Input	135	150	177	185	FWR Input	135	150	177	185
Temporal High	245	259	290	297	Temporal High	215	231	258	265
Temporal Medium	235	253	288	297	Temporal Medium	209	224	250	258
Temporal Low	232	251	282	292	Temporal Low	207	221	248	256
Non-temporal High	255	270	303	309	Non-temporal High	233	248	275	281
Non-temporal Medium	242	259	293	299	Non-temporal Medium	219	232	262	267
Non-temporal Low	238	254	291	295	Non-temporal Low	214	229	256	262

## **Candela Derating**

For K series products used at low temperatures, listed candela ratings must be reduced in accordance with this table.


Strobe Output (cd)	
Listed Candela	Candela rating at -40°F
15	
15/75	Do not use below 32°F
30	
75	44
95	70
110	110
115	115
135	135
150	150
177	177
185	185


## **Horn Tones and Sound Output Data**


			8-17.5		16-33		24 Volt Nominal			
Switch			Volts	5	Volts	5	Rever	berant	Aned	hoic
Position	<b>Sound Pattern</b>	dB	DC	FWR	DC	FWR	DC	FWR	DC	FWR
1	Temporal	High	78	78	84	84	88	88	99	98
2	Temporal	Medium	74	74	80	80	86	86	96	96
3	Temporal	Low	71	73	76	76	83	80	94	89
4	Non-temporal	High	82	82	88	88	93	92	100	100
5	Non-temporal	Medium	78	78	85	85	90	90	98	98
6	Non-temporal	Low	75	75	81	81	88	84	96	92
7 <sup>†</sup>	Coded	High	82	82	88	88	93	92	101	101
8 <sup>†</sup>	Coded	Medium	78	78	85	85	90	90	97	98
9 <sup>†</sup>	Coded	Low	75	75	81	81	88	85	96	92

<sup>†</sup>Settings 7, 8, and 9 are not available on 2-wire horn/strobe.


## **SpectrAlert Advance Dimensions**









Wall-mount horn/strobes





Ceiling back box skirt



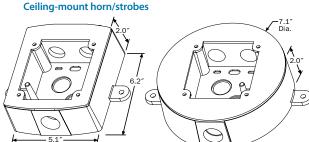

Wall back box skirt

Wall weatherproof back box

Ceiling weatherproof back box

# **SpectrAlert Advance Ordering Information**

Wall Horn/Strobes         P2R*†       2-wire Horn/Strobe, Standard cd*, Red         P2RH*       2-wire Horn/Strobe, High cd, Red, Outdoor         P2RK***       2-wire Horn/Strobe, Standard cd, Red, Outdoor         P2RHK*       2-wire Horn/Strobe, High cd, White         P2W*       2-wire Horn/Strobe, Standard cd, White         P2WH*       2-wire Horn/Strobe, High cd, Red         P4R*       4-wire Horn/Strobe, Standard cd, Red         P4RH*       4-wire Horn/Strobe, Standard cd, Red, Outdoor         P4RK*       4-wire Horn/Strobe, High cd, Red, Outdoor         P4RHK*       4-wire Horn/Strobe, Standard cd, White         P4W*       4-wire Horn/Strobe, High cd, White         Wall Strobes         SR*†       Strobe, Standard cd, Red         SRK**       Strobe, Standard cd, Red, Outdoor	
P2RH* 2-wire Horn/Strobe, High cd, Red P2RK*a 2-wire Horn/Strobe, Standard cd, Red, Outdoor P2RHKa 2-wire Horn/Strobe, High cd, Red, Outdoor P2W* 2-wire Horn/Strobe, Standard cd, White P2WH* 2-wire Horn/Strobe, High cd, White P4R* 4-wire Horn/Strobe, Standard cd, Red P4RH* 4-wire Horn/Strobe, High cd, Red P4RKa 4-wire Horn/Strobe, Standard cd, Red, Outdoor P4RHKa 4-wire Horn/Strobe, High cd, Red, Outdoor P4RHKa 4-wire Horn/Strobe, High cd, Red, Outdoor P4W* 4-wire Horn/Strobe, Standard cd, White P4WH* 4-wire Horn/Strobe, High cd, White  Wall Strobes SR*† Strobe, Standard cd, Red SRH*† Strobe, High cd, Red	
P2RK*** 2-wire Horn/Strobe, Standard cd, Red, Outdoor P2RHK** 2-wire Horn/Strobe, High cd, Red, Outdoor P2W* 2-wire Horn/Strobe, Standard cd, White P2WH* 2-wire Horn/Strobe, High cd, White P4R* 4-wire Horn/Strobe, Standard cd, Red P4RH* 4-wire Horn/Strobe, High cd, Red P4RK* 4-wire Horn/Strobe, Standard cd, Red, Outdoor P4RHK* 4-wire Horn/Strobe, Standard cd, Red, Outdoor P4RHK* 4-wire Horn/Strobe, High cd, Red, Outdoor P4W* 4-wire Horn/Strobe, Standard cd, White P4WH* 4-wire Horn/Strobe, High cd, White  Wall Strobes SR*† Strobe, Standard cd, Red SRH*† Strobe, High cd, Red	
P2RHK" 2-wire Horn/Strobe, High cd, Red, Outdoor P2W* 2-wire Horn/Strobe, Standard cd, White P2WH* 2-wire Horn/Strobe, High cd, White P4R* 4-wire Horn/Strobe, Standard cd, Red P4RK" 4-wire Horn/Strobe, High cd, Red P4RK" 4-wire Horn/Strobe, Standard cd, Red, Outdoor P4RHK" 4-wire Horn/Strobe, High cd, Red, Outdoor P4W* 4-wire Horn/Strobe, Standard cd, White P4WH* 4-wire Horn/Strobe, High cd, White  Wall Strobes SR*† Strobe, Standard cd, Red SRH*† Strobe, High cd, Red	
P2W* 2-wire Horn/Strobe, Standard cd, White P2WH* 2-wire Horn/Strobe, High cd, White P4R* 4-wire Horn/Strobe, Standard cd, Red P4RH* 4-wire Horn/Strobe, High cd, Red P4RK° 4-wire Horn/Strobe, Standard cd, Red, Outdoor P4RHK° 4-wire Horn/Strobe, High cd, Red, Outdoor P4W* 4-wire Horn/Strobe, Standard cd, White P4WH* 4-wire Horn/Strobe, High cd, White  Wall Strobes SR*† Strobe, Standard cd, Red SRH*† Strobe, High cd, Red	
P2WH* 2-wire Horn/Strobe, High cd, White P4R* 4-wire Horn/Strobe, Standard cd, Red P4RH* 4-wire Horn/Strobe, High cd, Red P4RK" 4-wire Horn/Strobe, Standard cd, Red, Outdoor P4RHK" 4-wire Horn/Strobe, High cd, Red, Outdoor P4W* 4-wire Horn/Strobe, Standard cd, White P4WH* 4-wire Horn/Strobe, High cd, White Wall Strobes SR*† Strobe, Standard cd, Red SRH*† Strobe, High cd, Red	
P4R* 4-wire Horn/Strobe, Standard cd, Red P4RH* 4-wire Horn/Strobe, High cd, Red P4RK" 4-wire Horn/Strobe, Standard cd, Red, Outdoor P4RHK" 4-wire Horn/Strobe, High cd, Red, Outdoor P4W* 4-wire Horn/Strobe, Standard cd, White P4WH* 4-wire Horn/Strobe, High cd, White  Wall Strobes SR*† Strobe, Standard cd, Red SRH**† Strobe, High cd, Red	
P4RH* 4-wire Horn/Strobe, High cd, Red P4RK" 4-wire Horn/Strobe, Standard cd, Red, Outdoor P4RHK" 4-wire Horn/Strobe, High cd, Red, Outdoor P4W* 4-wire Horn/Strobe, Standard cd, White P4WH* 4-wire Horn/Strobe, High cd, White  Wall Strobes SR*† Strobe, Standard cd, Red SRH*† Strobe, High cd, Red	
P4RK" 4-wire Horn/Strobe, Standard cd, Red, Outdoor P4RHK" 4-wire Horn/Strobe, High cd, Red, Outdoor P4W* 4-wire Horn/Strobe, Standard cd, White P4WH* 4-wire Horn/Strobe, High cd, White  Wall Strobes SR*† Strobe, Standard cd, Red SRH*† Strobe, High cd, Red	
P4RHK" 4-wire Horn/Strobe, High cd, Red, Outdoor P4W* 4-wire Horn/Strobe, Standard cd, White P4WH* 4-wire Horn/Strobe, High cd, White  Wall Strobes SR*† Strobe, Standard cd, Red SRH*† Strobe, High cd, Red	
P4W* 4-wire Horn/Strobe, Standard cd, White P4WH* 4-wire Horn/Strobe, High cd, White  Wall Strobes  SR*† Strobe, Standard cd, Red  SRH*† Strobe, High cd, Red	
P4WH* 4-wire Horn/Strobe, High cd, White  Wall Strobes  SR*† Strobe, Standard cd, Red  SRH*† Strobe, High cd, Red	
Wall Strobes           SR*†         Strobe, Standard cd, Red           SRH*†         Strobe, High cd, Red	
SR*† Strobe, Standard cd, Red SRH*† Strobe, High cd, Red	
SRH*† Strobe, High cd, Red	
, 3	
SRK <sup>n</sup> Strobe, Standard cd, Red, Outdoor	
SRHK Strobe, High cd, Red, Outdoor	
SW* Strobe, Standard cd, White	
SWH* Strobe, High cd, White	
Ceiling Horn/Strobes	
PC2R* 2-wire Horn/Strobe, Standard cd, Red	
PC2RH* 2-wire Horn/Strobe, High cd, Red	
PC2RK <sup>¤</sup> 2-wire Horn/Strobe, Standard cd, Red, Outdoor	
PC2RHK <sup>a</sup> 2-wire Horn/Strobe, High cd, Red, Outdoor	
PC2W* <sup>†</sup> 2-wire Horn/Strobe, Standard cd, White	
PC2WH* <sup>†</sup> 2-wire Horn/Strobe, High cd, White	
PC4R 4-wire Horn/Strobe, Standard cd, Red	
PC4RH 4-wire Horn/Strobe, High cd, Red	
PC4RK 4-wire Horn/Strobe, Standard cd, Red, Outdoor	
PC4RHK" 4-wire Horn/Strobe, High cd, Red, Outdoor	

Model	Description
Ceiling Horn	/Strobes (cont'd.)
PC4W	4-wire Horn/Strobe, Standard cd, White
PC4WH	4-wire Horn/Strobe, High cd, White
<b>Ceiling Strob</b>	es
SCR*	Strobe, Standard cd, Red
SCRH*	Strobe, High cd, Red
SCRK <sup>□</sup>	Strobe, Standard cd, Red, Outdoor
SCRHK™	Strobe, High cd, Red, Outdoor
SCW*†	Strobe, Standard cd, White
SCWH*†	Strobe, High cd, White
Horns	
HR	Horn, Red
HRK¤	Horn, Red, Outdoor
HW	Horn, White
Accessories	
BBS-2	Back Box Skirt, Wall, Red
BBSW-2	Back Box Skirt, Wall, White
BBSC-2	Back Box Skirt, Ceiling, Red
BBSCW-2	Back Box Skirt, Ceiling, White
TR-HS	Trim Ring, Wall, Red
TRW-HS	Trim Ring, Wall White
TRC-HS	Trim Ring, Ceiling, Red
TRCW-HS	Trim Ring, Ceiling, White

## Notes:

- \* Add "-P" to model number for plain housing (no "FIRE" marking on cover), e.g., P2R-P
- † Add "-SP" to model number for "FUEGO" marking on cover, e.g., P2R-SP.
- ‡"Standard cd," refers to strobes that include 15, 15/75, 30, 75, 95, 110, and 115 candela settings. "High cd," refers to strobes that include 135, 150, 177, and 185 candela settings.
- All outdoor units ending in "K" include a weatherproof back box.
- ${\tt m}$  Add "-R" to model number for weather proof replacement device (no back box included).

