BELVEDERE ROOF FRAMING NOTES:
1. TREAT ALL FRAMING WITH BORA-CARE PRIOR TO INSULATING AND REINSTALLING SHEATHING.
2. SHEATHING TO CONSIST OF ½" ADVANTEK SHEATHING WITH EDGE BLOCKING OF 4x4 OR 4x6 P.T. AS REQUIRED BY EXISTING JOIST DEPTH.

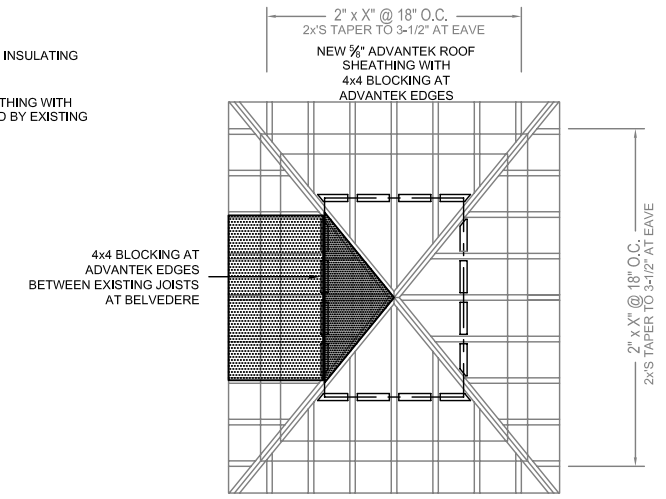

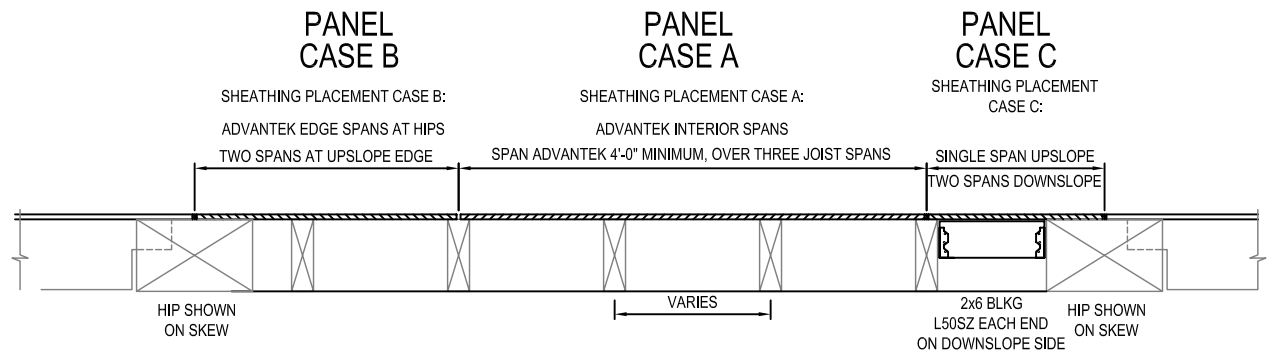

1 / S-2 BELVEDERE ROOF FRAMING PLAN
1/4" = 1'-0"

1 / S-2 ADVANTEK SUPPORT DETAILS
1/4" = 1'-0"

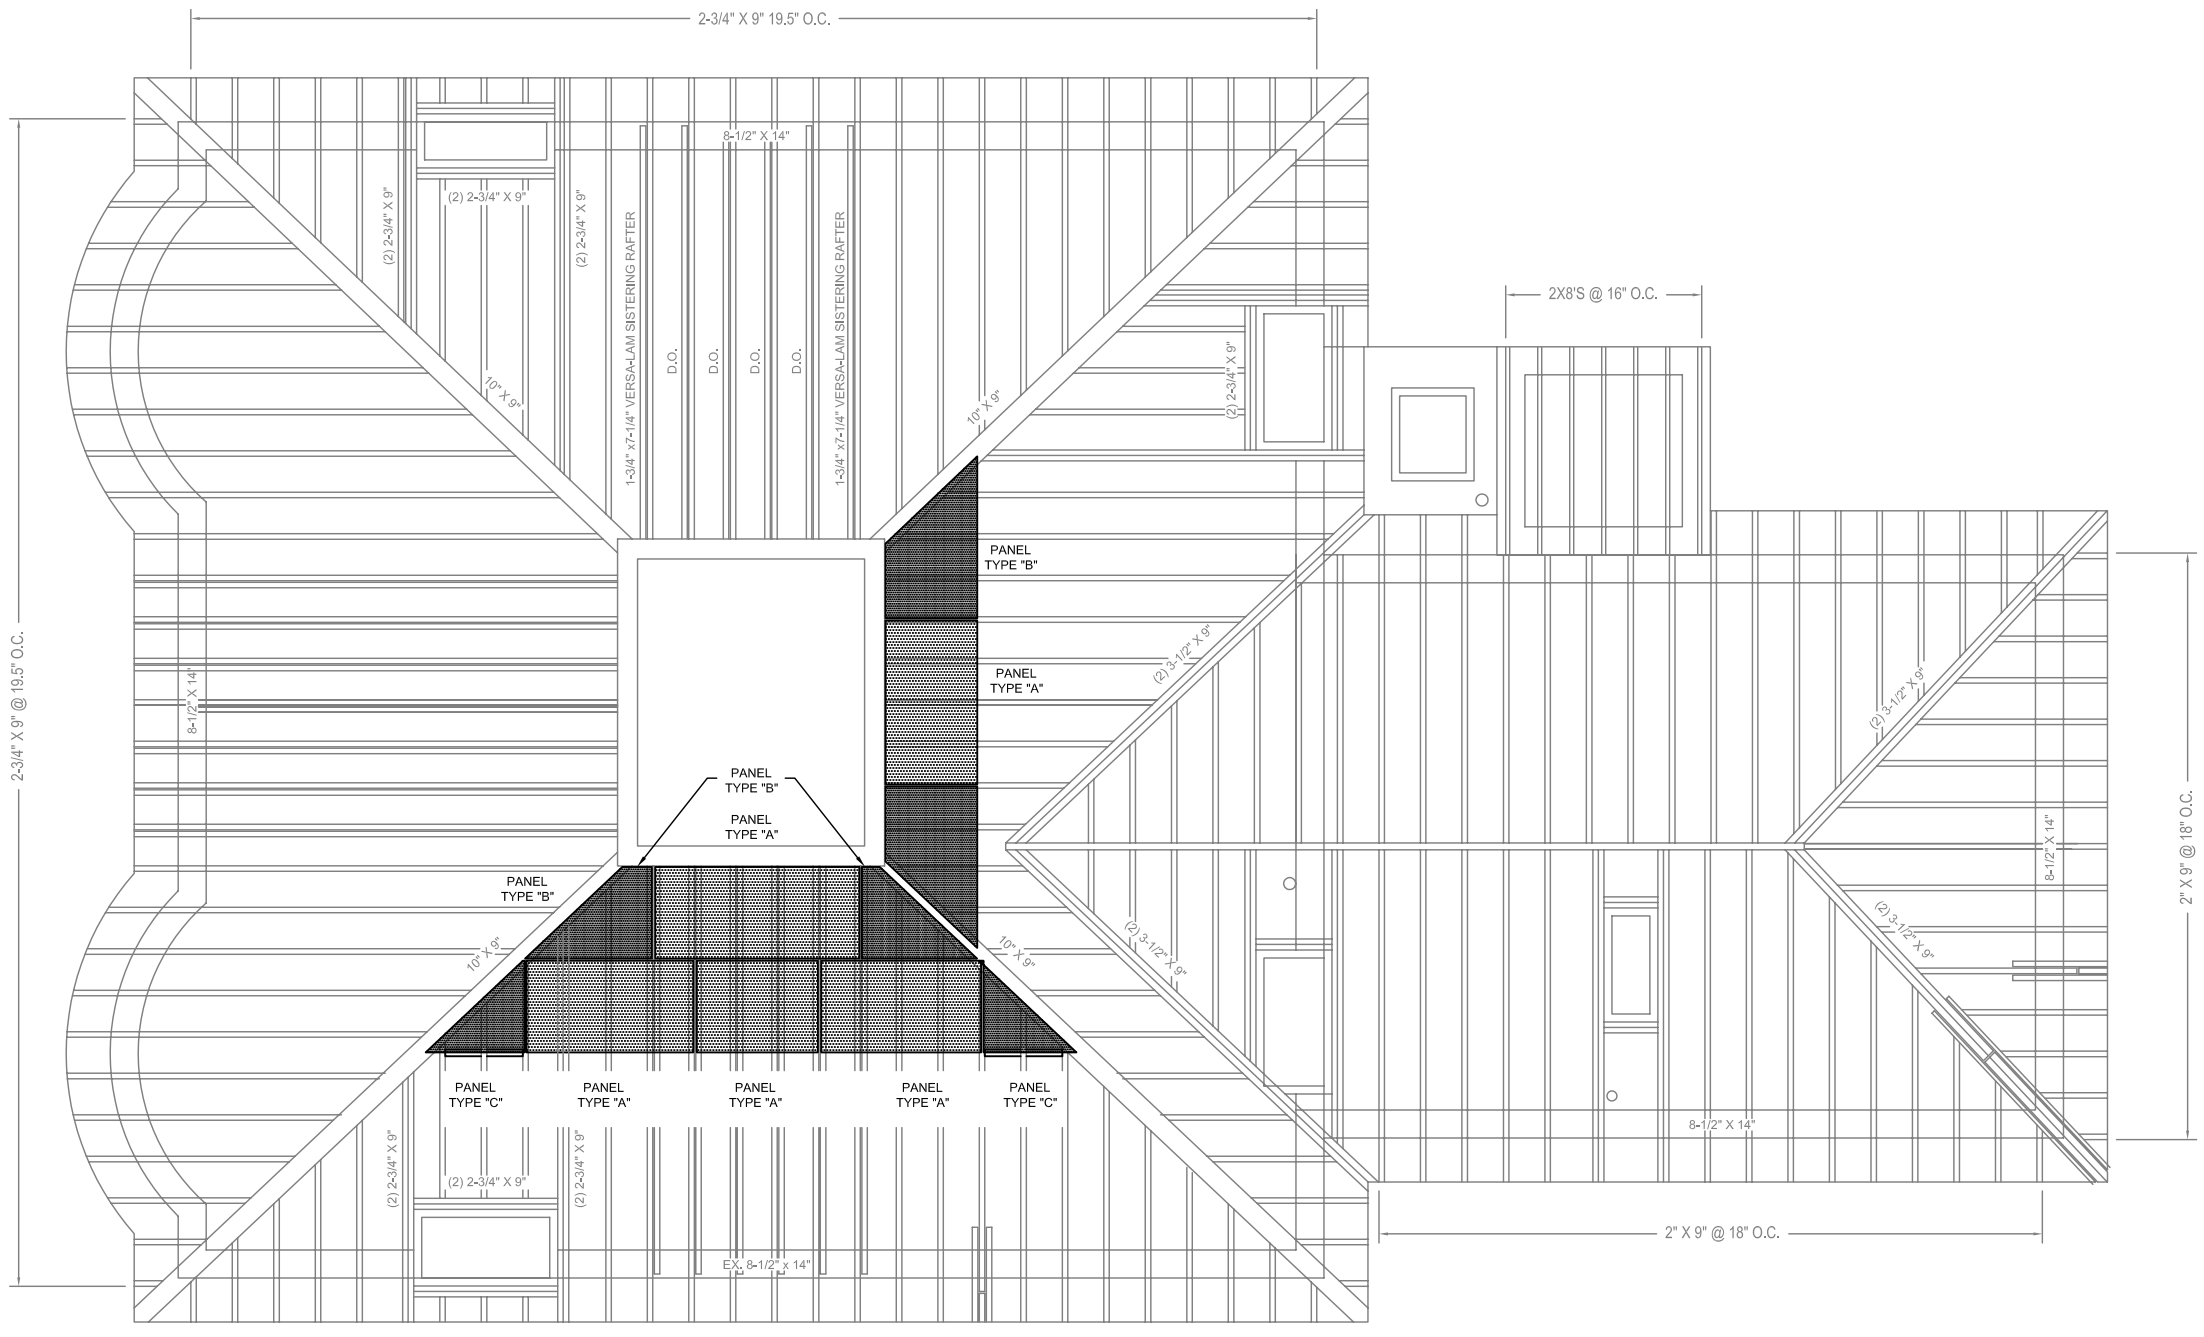

2 / S-2 MAIN ROO FRAMING PLAN
1/4" = 1'-0"

B / S-2 GIRDER ROT REPAIR
3/4" = 1'-0"

ttl-architects
28 DANFORTH STREET
SUITE 213
PORTLAND, MAINE 04101
TEL. 207.761.9662
FAX. 207.761.9696

RESURGEN
ENGINEERING & PRESERVATIO
132 BRENTWOOD STRE
PORTLAND, ME 0410
207.773.4880

STATE OF MAINE
ALFRED H. HODSON III
No. 9246
LICENSED PROFESSIONAL ENGINEER

Greater Portland Landmarks
Safford House
Roof and Eave Restoration
93 High Street

Date: 06 August 2010
Scale: As Shown
Revisions:

Title:
Schematic Sheathing Layout

Sheet No: S-2