KEYNOTES:

1. 2"AV DN & RISE
   3/4"TW DROP
   1/2"PCW DROP & 1/2"TP DN — EE 2 / 6 P3.01 — TRAP PRIMER (TYP.)
   1/2"PHW DROP
   (2)3/4"ROS DROP
   2"AW DN & AV RISE
   1/2"CA DROP
   3/4"VAC DROP
2. 1/2"CA DROP
   3/4"VAC DROP
   1/2"PCW DROP
3. 1/2"G DROP
   3/4"VAC DROP
4. 1-1/2"GAS
   1-1/2"TW
   1"CA
   1-1/4"VAC
   1"PCW
   3/4"PHW
   3/4"PHWR
   3/4"ROS
   3/4"ROR
5. RUN 1/2"CA & 3/4"VAC UNDER COUNTER TO TURRETS COORDINATE W/ CASEWORK
6. 2"AW DN & AV RISE
7. 1/2"PCW DROP
   1/2"PHW DROP
   2"AW DN & AV RISE
   (2)3/4"ROS DROP
8. 1/2"PCW
   1/2"PHW
   2"AV
   (2)3/4"ROS
9. 1-1/2"GAS
   1-1/2"TW
   1"CA
   1-1/4"VAC
   1"PCW
   3/4"PHW
   3/4"PHWR
   3/4"ROS
   3/4"ROR
10. 1"GAS
    3/4"TW
    3/4"PCW
    1/2"PHW
    3/4"ROS
    3/4"ROS
    3/4"CA
    1"VAC
11. 1-1/2"TW UP & DN
    2"CA UP & DN
    3"VAC UP & DN
    2"PCW UP & DN
    2"PHW UP & DN
    1"PHWR UP & DN
    1-1/2"ROS UP & 2" DN
    1-1/2"ROR UP & 2" DN
    — 8 P3.01 — LABORATORY RISERS CTE RISERS AT SECOND FLOOR CEILING. EXTEND TO FIFTH FLOOR CEILING. DUPLICATE ROS BALANCING VALVE STATION SIMILAR TO SECOND FLOOR EXISTING CONDITIONS AND DETAILS ON DRAWINGS.
12. 3/4"ROR
    3/4"ROS
    3/4"PHWR
    1-1/4"PHW
    1-1/4"PCW
    1-1/4"VAC
    1"CA
    1-1/2"TW
    1-1/2"GAS
13. 1/2"PCW
    3/4"VAC
    1/2"CA
    1/2"GAS (CAPPED AT CEILING FOR FUTURE)
14. 1/2"PCW
    1/2"PHW
    (2)3/4"ROS
15. 1/2"G DROP
16. 1/2"CA DROP
    3/4"VAC DROP
17. 2"AV DN & RISE
    1/2"PCW DROP & 1/2"TP DN — 6 P3.01
    1/2"CA DROP
    3/4"VAC DROP
18. 1/2"HW DROP
    2"W DN & V RISE
    1/2"CW DROP
19. 2"W DN & V RISE
    1/2"CW DN
20. 3/4"TW
    3/4"PCW
    1/2"PHW
    3/4"ROS
    3/4"ROS
    3/4"CA
    1"VAC
21. 3/4"TW
    3/4"PCW
    1/2"PHW
    3/4"ROS
    3/4"ROS
    3/4"CA
    1"VAC

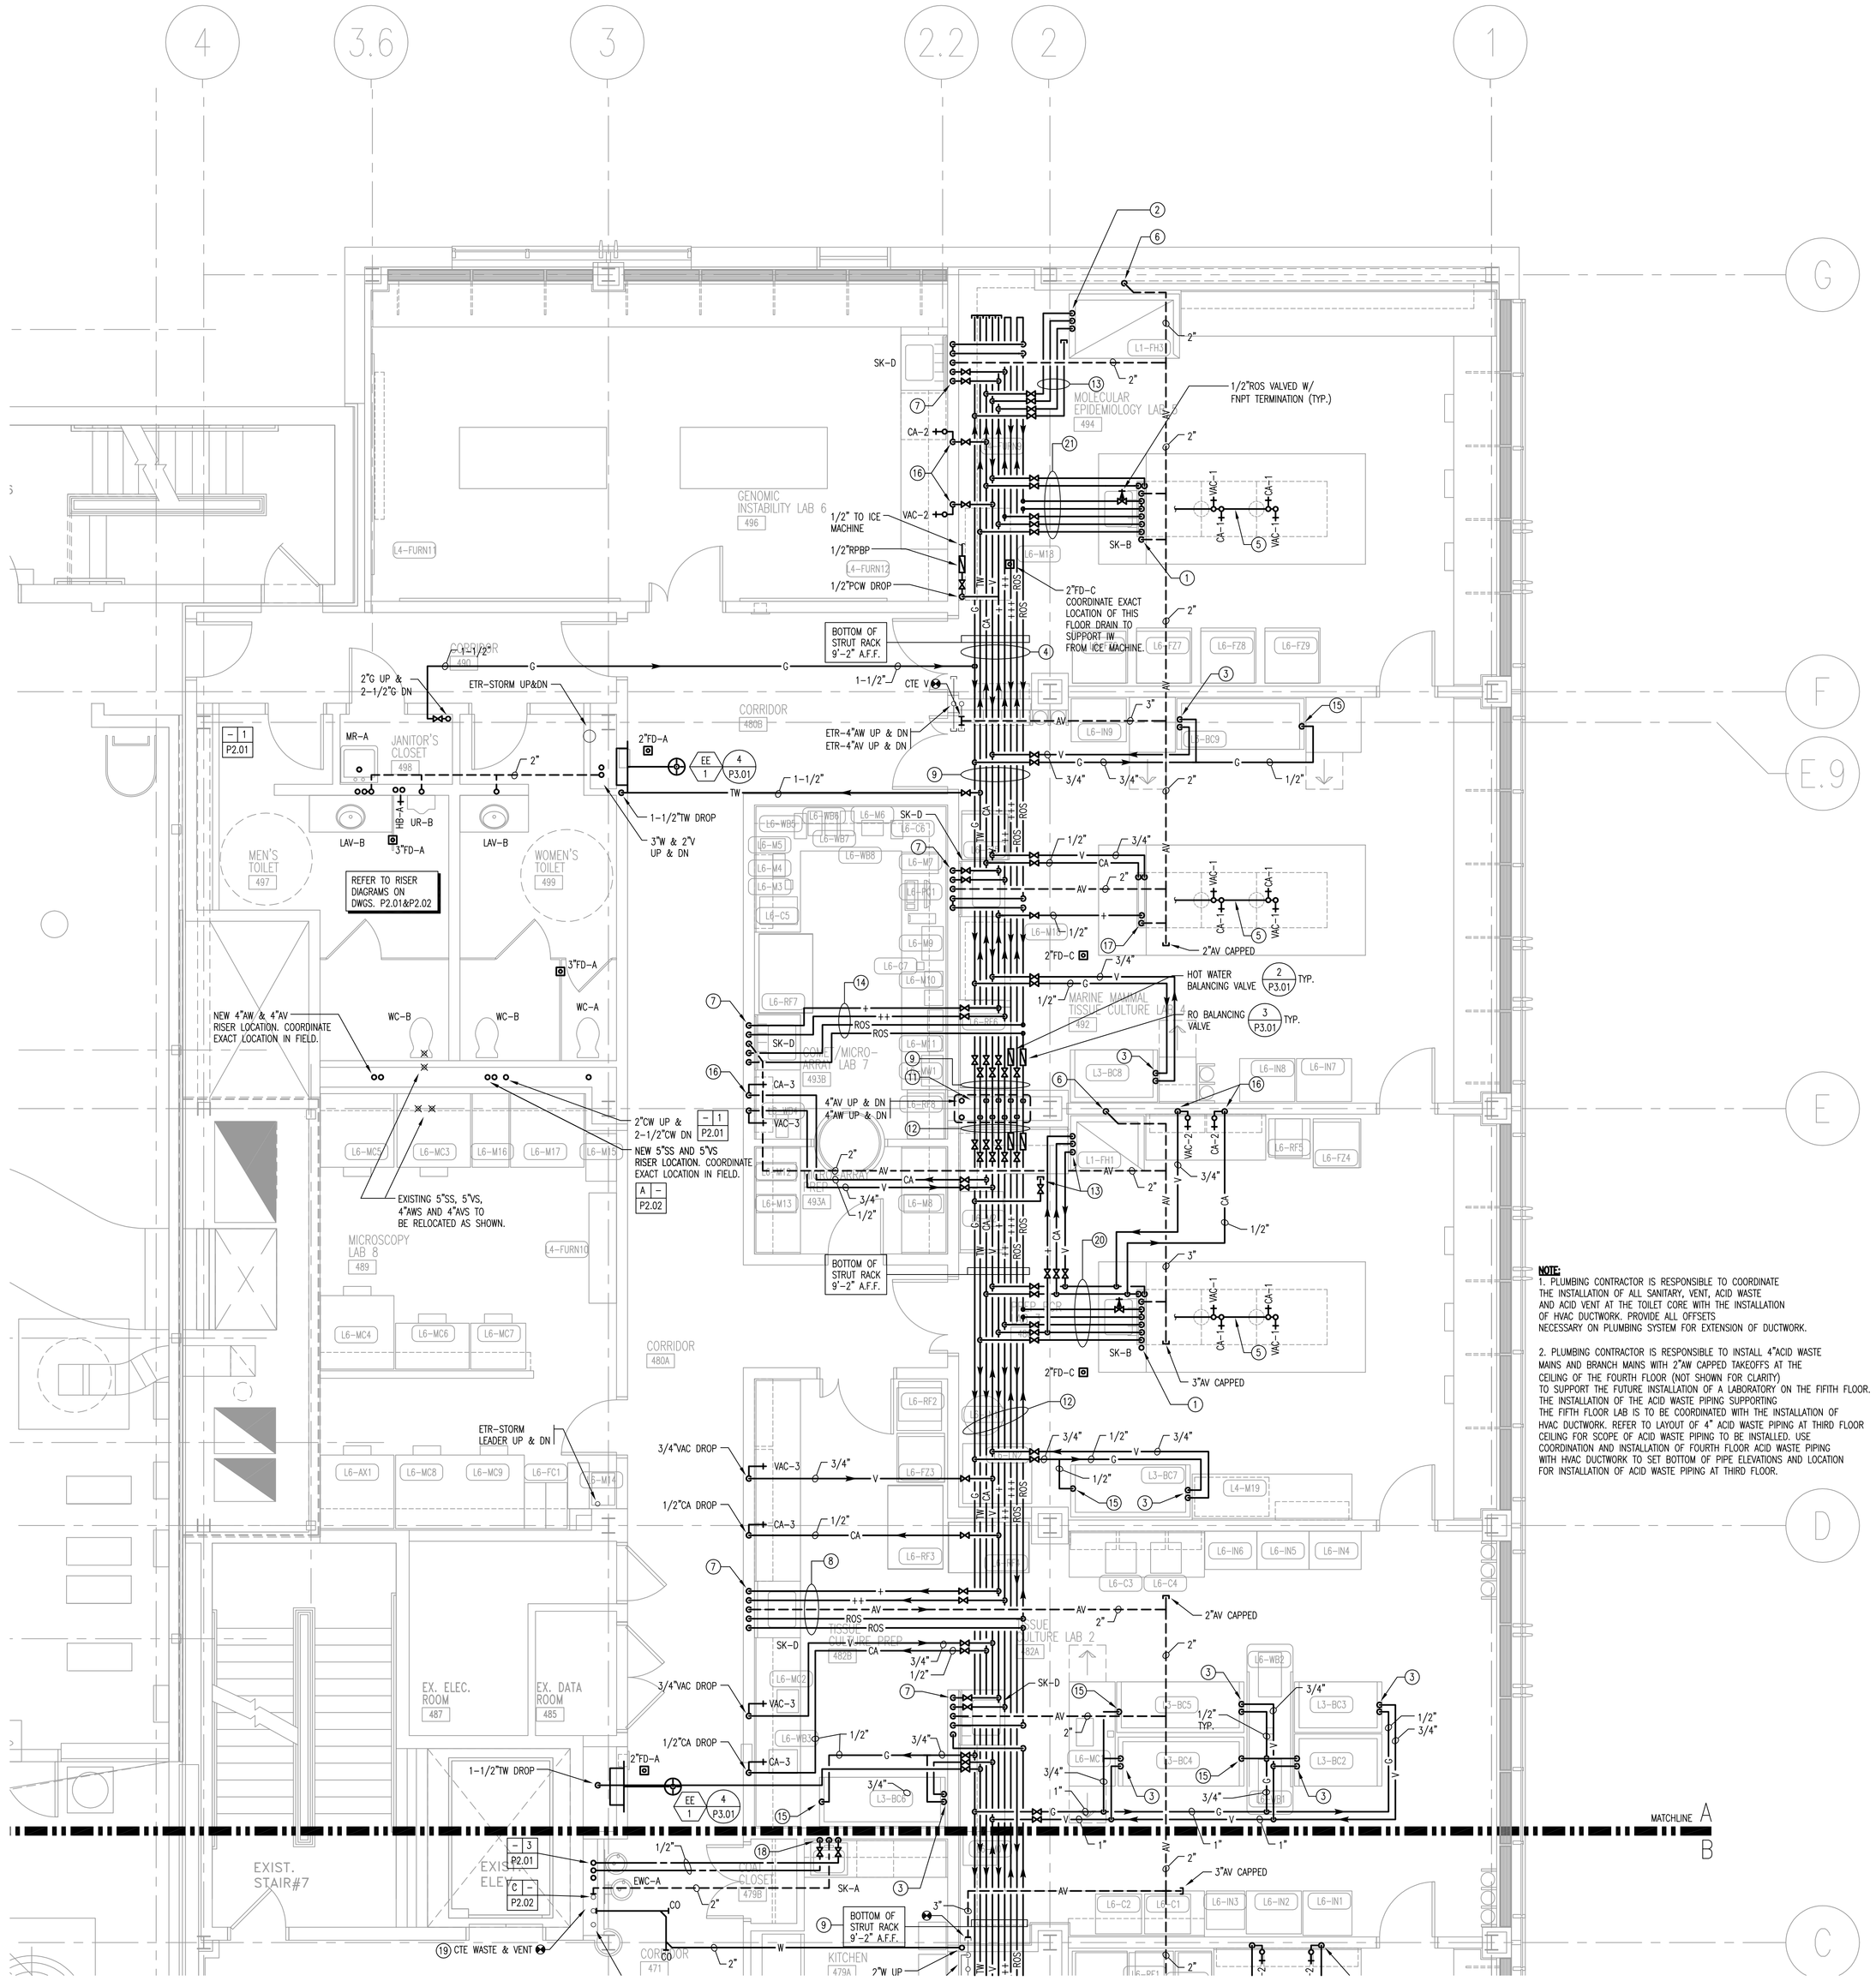

NOTE:

1. PLUMBING CONTRACTOR IS RESPONSIBLE TO COORDINATE THE INSTALLATION OF ALL SANITARY, VENT, ACID WASTE AND ACID VENT AT THE TOILET CORE WITH THE INSTALLATION OF HVAC DUCTWORK. PROVIDE ALL OFFSETS NECESSARY ON PLUMBING SYSTEM FOR EXTENSION OF DUCTWORK.

2. PLUMBING CONTRACTOR IS RESPONSIBLE TO INSTALL 4"ACID WASTE MAINS AND BRANCH MAINS WITH 2"AW CAPPED TAKEOFFS AT THE CEILING OF THE FOURTH FLOOR (NOT SHOWN FOR CLARITY) TO SUPPORT THE FUTURE INSTALLATION OF A LABORATORY ON THE FIFITH FLOOR. THE INSTALLATION OF THE ACID WASTE PIPING SUPPORTING THE FIFTH FLOOR LAB IS TO BE COORDINATED WITH THE INSTALLATION OF HVAC DUCTWORK. REFER TO LAYOUT OF 4" ACID WASTE PIPING AT THIRD FLOOR CEILING FOR SCOPE OF ACID WASTE PIPING TO BE INSTALLED. USE COORDINATION AND INSTALLATION OF FOURTH FLOOR ACID WASTE PIPING WITH HVAC DUCTWORK TO SET BOTTOM OF PIPE ELEVATIONS AND LOCATION FOR INSTALLATION OF ACID WASTE PIPING AT THIRD FLOOR.

KEYPLAN

PROJECT NORTH
TRUE NORTH

SMMA
SYMMES MAINI & MCKEE ASSOCIATES

1000 Massachusetts Avenue
Cambridge, Massachusetts 02138
617.547.5400 Fax 617.354.5758

OWNER REVIEW

NAME	DATE

NO.	DATE	DESCRIPTION
	06.21.06	ISSUED FOR CONSTRUCTION
.	05.03.06	SCOPE REVISION
C	03.22.06	100% QC REVIEW
B	03.16.06	PROGRESS PRINT
A	03.08.06	80% PROGRESS PRINT

ISSUE LOG

△ = CLOUDED CHANGE

UNIVERSITY OF SOUTHERN MAINE
70 FALMOUTH STREET
PORTLAND, MAINE

RESEARCH WING
PHASE III FIT-OUT

FOURTH FLOOR PLAN PART A

SCALE	1/4"=1'-0"
DRAWN BY	MVR
CHECKED BY	
PROJ. ARCH. / ENGR.	MD/TGW
PROJ. MGR.	RCH
JOB NO.	03049.10

© SYMMES, MAINI & MCKEE ASSOCIATES, INC. 2004

P1.04a