Demolition Notes

1. Remove exsiting door, frame and blocking. Prep opening for infill wall.
2. Remove existing door or window.
3. Remove exisitng wall.
4. Remove existing flooring, backing and accessories.
5. Remove existing plumbing fixture.
7. Remove existing lighting fixtures from ceiling.
8. Remove existing closet rods and shelving.
9. Remove existing lavatory and toilet cap all water lines, waste lines and floor drain at floor level.
10. Remove countertops, cupboards and cabinets.

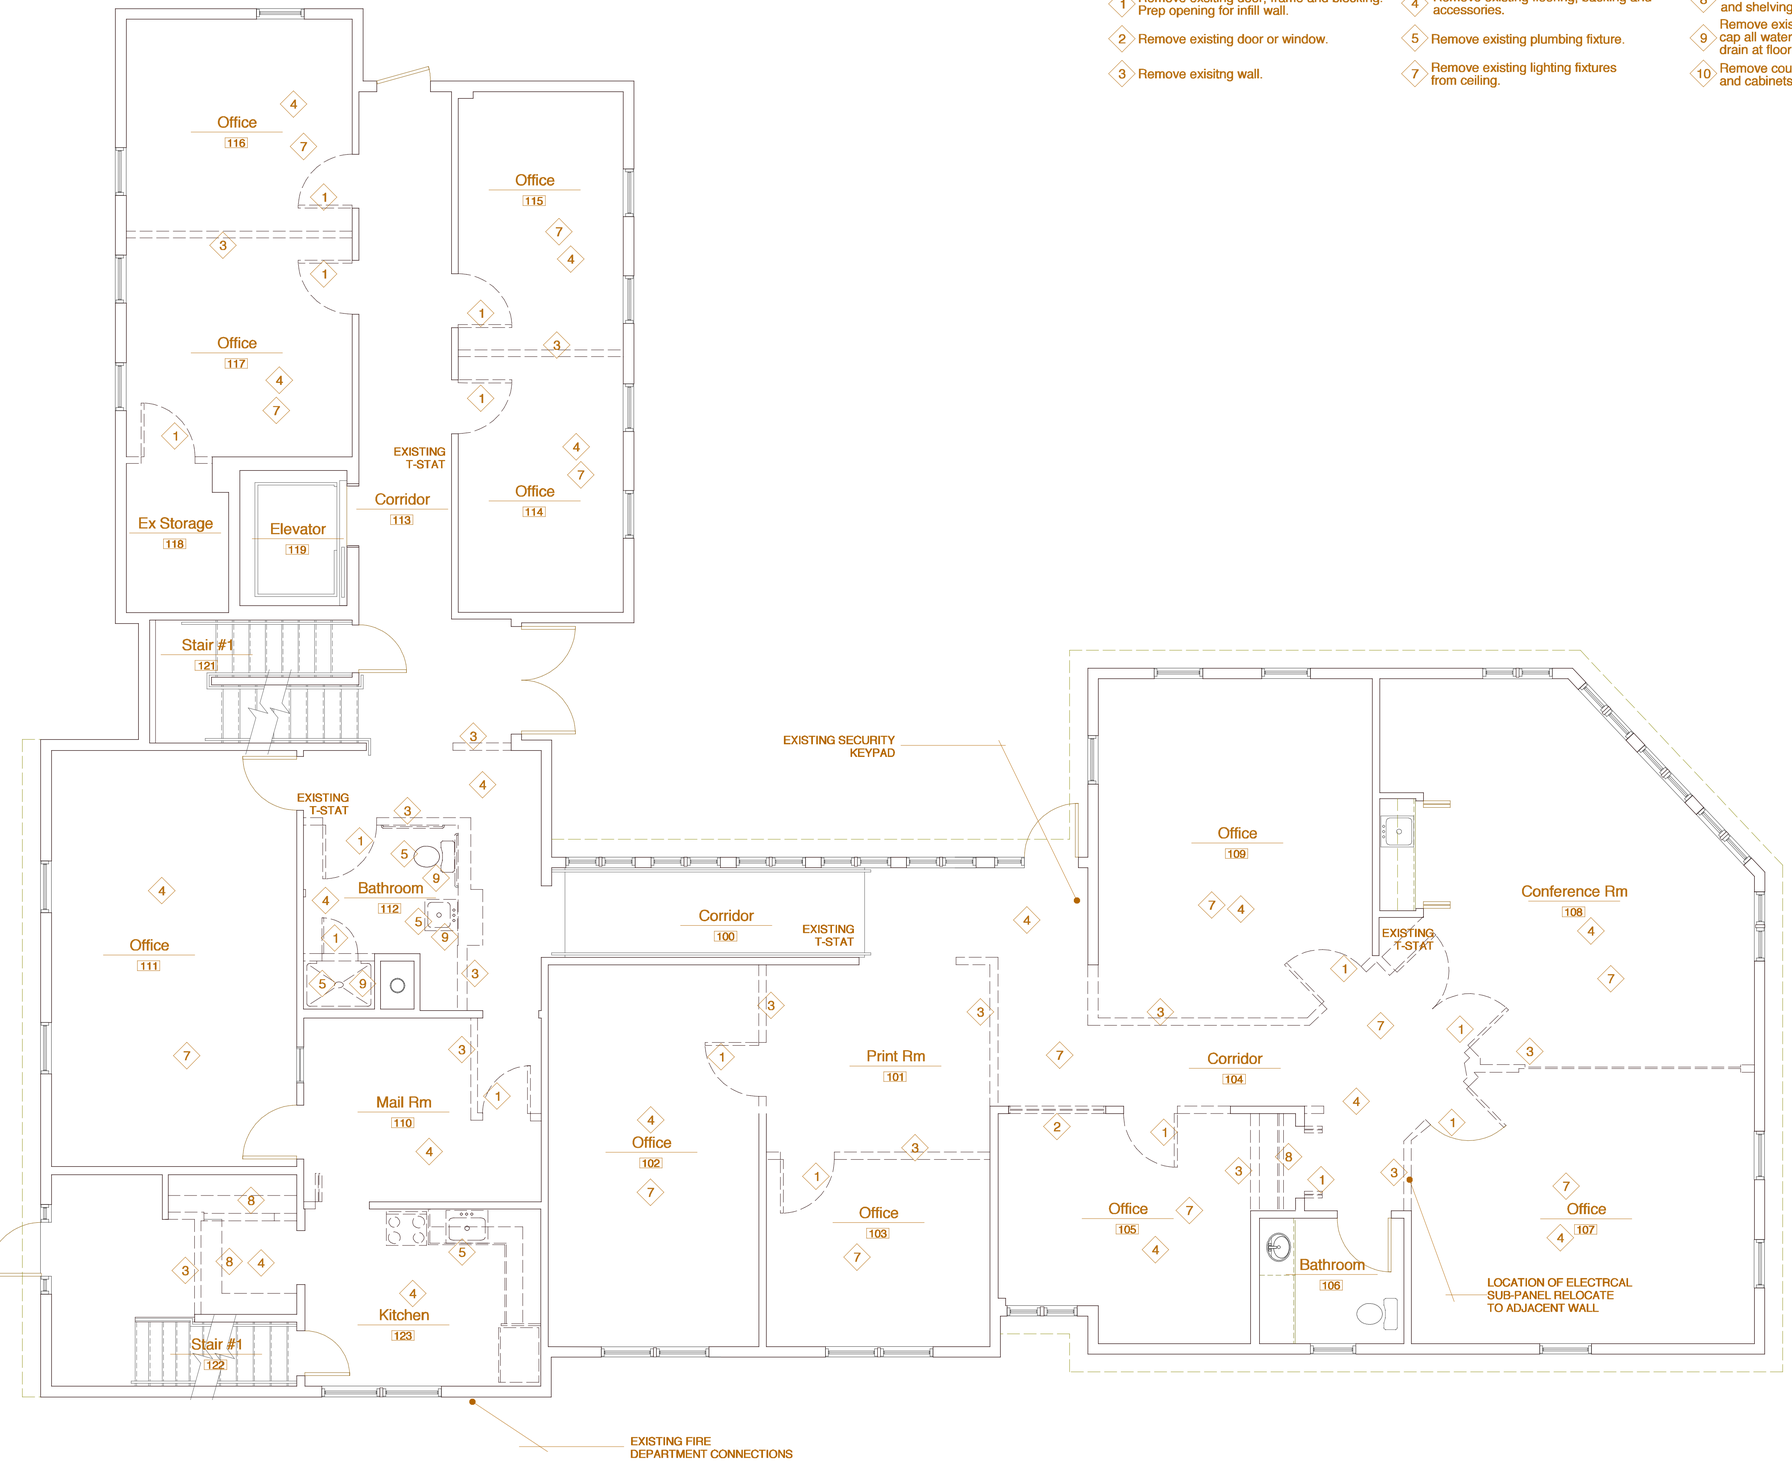

10 First Floor Demolition Plan

0 4 12 24

GARRISON CONSULTING

41 edgewood ave
portland, maine 04103
telephone 207 450 0750

e-mail matthewwinch@earthlink.net

Revisions	date
NONE	none

project name: Spurwink Services Kaufman House Renovation

project location: 899 Riverside Street Portland, Maine

plan north

date: March 2, 2015
scale: 1/4" = 1'-0"
project #: 2014-011
drawing title: First Floor Demolition Plan
drawing number: D101