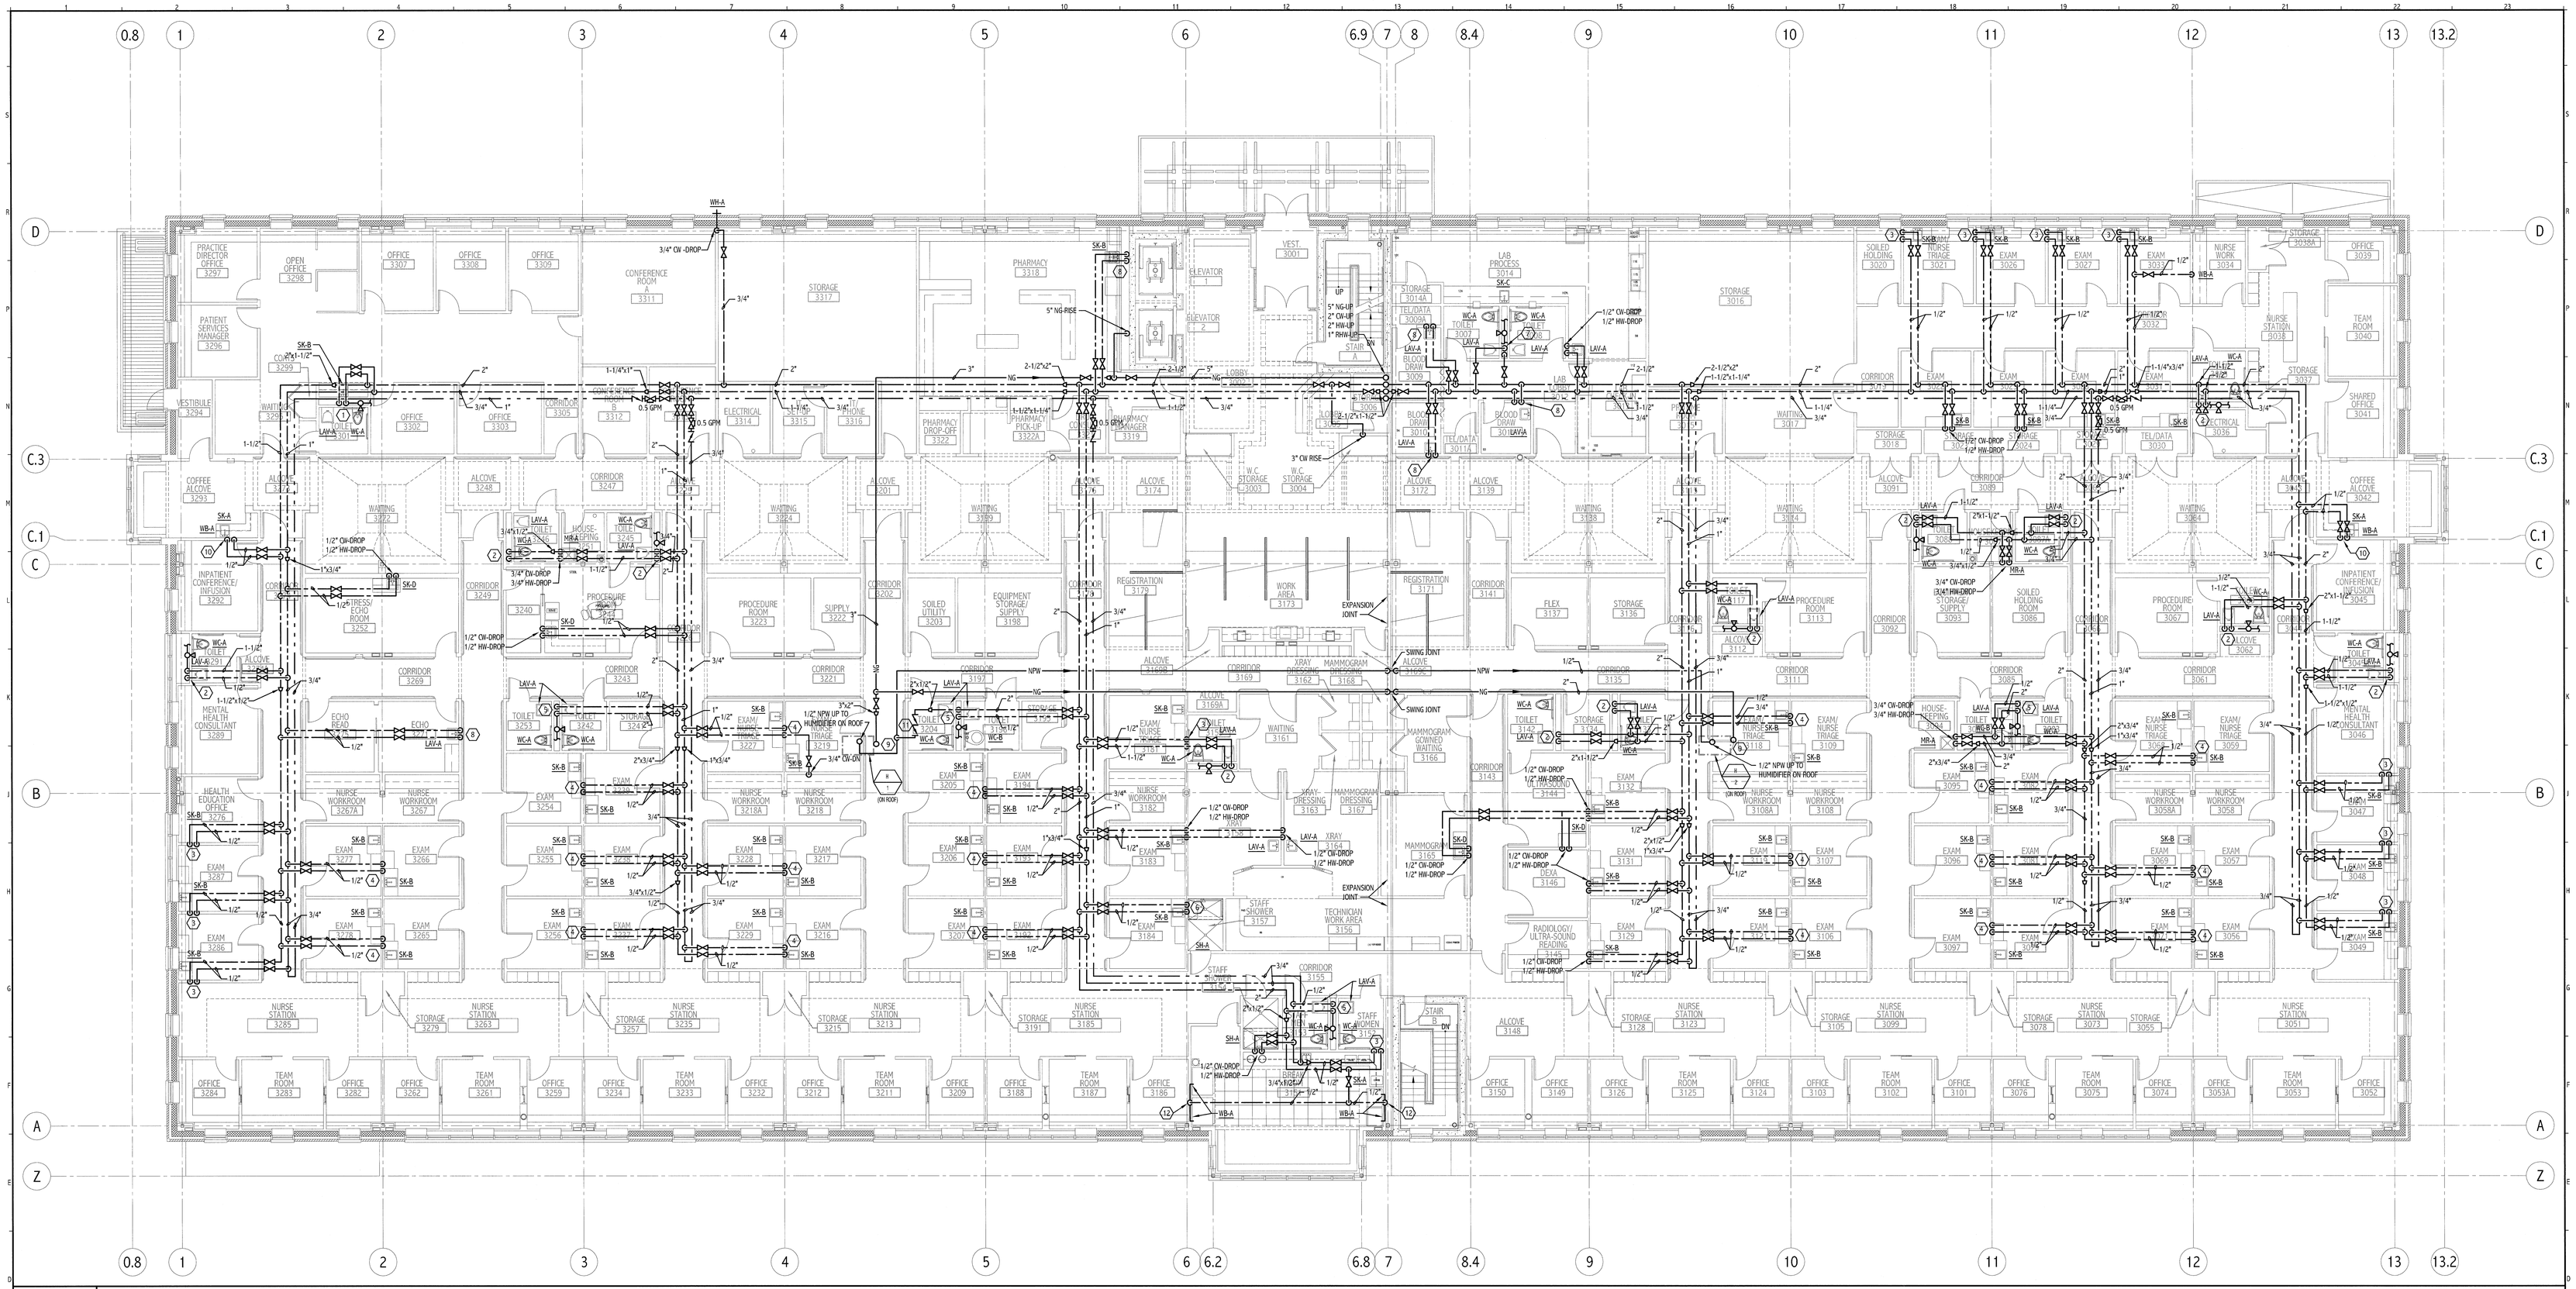

D1 THIRD LEVEL FLOOR PLAN

1/8" = 1'-0"

KEYED NOTES:

1. 1-1/2" CW AND 1/2" HW-DROP AND RUN FULL-SIZE WITHIN CHASE. ROUTE 1" CW TO WC-A. ROUTE 1/2" CW AND 1/2" HW - EACH TO LAV-A AND SK-B. ROUTE 1/2" CW BENEATH COUNTER THRU RPZ AND FILTER AND CONNECT TO COFFEE MAKER. PROVIDE A WATER HAMMER ARRESTOR WITH SHUT-OFF VALVE - ACCESSIBLE, PRIOR TO CONNECTION OF WC-A.
2. 1-1/2" CW AND 1/2" HW-DROP AND RUN FULL-SIZE WITHIN CHASE. ROUTE 1" CW TO WC-A. ROUTE 1/2" CW AND 1/2" HW-EACH TO LAV-A. PROVIDE A WATER HAMMER ARRESTOR WITH SHUT-OFF VALVE-ACCESSIBLE, PRIOR TO CONNECTION OF WC-A.
3. 1/2" CW AND 1/2" HW-DROP IN WALL. ROUTE BENEATH COUNTER TOP. ROUTE 1/2" CW AND 1/2" HW-EACH TO SK-A. ROUTE 1/2" CW TO WATER DISPENSER. ROUTE 1/2" CW THRU RPZ AND FILTER AND CONNECT TO COFFEE MAKER.
4. 1/2" CW AND 1/2" HW-DROP IN WALL. ROUTE 1/2" CW AND 1/2" HW-EACH TO EACH SK-B BENEATH COUNTERTOP AND CONNECT.
5. 2" CW AND 1/2" HW-DROP AND RUN FULL-SIZE WITHIN CHASE. ROUTE 1" CW TO EACH WC. ROUTE 1/2" CW AND 1/2" HW-EACH TO EACH LAV. PROVIDE A WATER HAMMER ARRESTOR WITH SHUT-OFF VALVE-ACCESSIBLE, PRIOR TO CONNECTION OF LAST FIXTURE.
6. 1/2" CW AND 1/2" HW DROP. ROUTE 1/2" CW AND 1/2" HW-EACH TO SK-B AND SH-A.
7. 3" CW-UP AND RISE. 1/2" HW-DROP. RUN 2" CW AND 1/2" HW FULL-SIZE WITHIN CHASE. ROUTE 1/2" CW AND 1/2" HW-EACH TO EACH LAV-A AND SK-A. ROUTE 1" CW TO EACH WC-A. PROVIDE A WATER HAMMER ARRESTOR WITH SHUT-OFF VALVE-ACCESSIBLE, PRIOR TO CONNECTION OF LAST FIXTURE.
8. 1/2" CW AND 1/2" HW-DROP.

KEYED NOTES CONTINUED:

9. 2" NG-UP THRU ROOF. PROVIDE SHUT-OFF VALVE AND UNION AT ROOF LEVEL. SEE DETAIL F15/PL501.
10. 1/2" CW AND 1/2" HW-DROP. ROUTE 1/2" CW AND 1/2" HW-EACH TO SK-A. ROUTE 1/2" CW TO WB-A. ROUTE 1/2" CW TO WATER DISPENSER. ROUTE 1/2" CW BENEATH COUNTER, THRU RPZ AND FILTER AND CONNECT TO COFFEE MAKER.
11. PROVIDE 1/2" RPZ IN CEILING. PIPE RELIEF PORT TO FUNNEL DRAIN AND SPILL.
12. 1/2" CW-DROP AND CONNECT TO EACH WB-A

NOTES:

1. SEE G001 FOR PROJECT GENERAL NOTES
2. SEE SHEET PL001 FOR PLUMBING LEGEND AND ABBREVIATIONS.
3. PROVIDE SWING JOINT OR ENGINEER APPROVED FLEXIBLE CONNECTOR WHERE PIPING PASSES THRU EXPANSION JOINT.

REV.	DESCRIPTION	DATE

ISSUED FOR G.M.P. & PERMITTING
4-3-09

CURRENT ISSUE STATUS:

PROJECT NORTH

SMRT
ARCHITECTURE
ENGINEERING
PLANNING
INTERIOR DESIGN
COMMISSIONING

144 Fore Street/P.O. Box 618
Portland, Maine 04104
tel. (207) 772-3846
fax. (207) 772-1070
www.smrtinc.com

MARTIN'S POINT HEALTH CARE
MEDICAL OFFICE BUILDING
PORTLAND, MAINE

THIRD LEVEL: MEDICAL OFFICES
SUPPLY PIPING PLAN
SHEET TITLE:

SCALE:	AS NOTED	DATE:	
PROJECT MANAGER:	SLB	GRAPHIC SCALE:	0" 1"
JOB CAP/DRAWN:	TCM/CDS		
A/E OF RECORD:	TAC	SHEET No.	
SMRT CAD FILE:	PL113-08139	PL113	
PROJECT No.	08139		

©COPYRIGHT 2009 SMRT INC

PROGRESS PRINT