# MERCY HOSPITAL PORTLAND, MAINE IMAGING ROOM EQUIPMENT REPLACEMENT DEMOLITION PACKAGE 8-31-12

## DRAWING LIST

### **GENERAL**

G-001	COVER SHEET
AD100	DEMOLITION PLAN
MD100	LIVAC DEMOLITION DI ANI

HVAC DEMOLITION PLAN HVAC DEMOLITION ROOF PLAN

PIPING DEMOLITION PLAN

ELECTRICAL DEMOLITION PLAN



					LEVO
ISSUED FOR DEMOLITION 8-31-12	CURRENT ISSUE STATUS:				- TO HOIGO OLG
	SU				i
SCALE:			1/4	"=1	

PROJECT MANAGER: MDR JC/DRAWN BY: A/E OF RECORD: CAD FILE: G001-12076 PROJECT NO: 1207

SHEET TITLE:

COVER SHEET DEMO PACKAGE

AD100 COPYRIGHT 2012 SMRT INC

## **GENERAL DEMOLITION NOTES:**


- 1. COORDINATE EXTENT OF DEMOLITION WITH LOCATIONS OF PARTITIONS DESCRIBED ON PLANS AND WITH LOCATIONS OF FINISHES NOTED AS EXISTING TO REMAIN.
- 2. ANY WALL, PARTITION OR SURFACE DISTURBED BECAUSE OF NEW WORK OR DEMOLITION SHALL BE PATCHED AND FINISHED CONTINUOUSLY TO THE NEAREST CORNER UNLESS NOTED OTHERWISE, MATCH EXISTING ADJACENT CONSTRUCTION FINISHES, CONTINUITY AND FIRE RATINGS UNLESS NOTED OTHERWISE.
- 3. PROTECT ALL FINISHES, MATERIALS AND EQUIPMENT NOTED AS EXISTING TO REMAIN. CONTRACTOR SHALL BE RESPONSIBLE TO REPLACE ALL FINISHES, MATERIALS AND EQUIPMENT DAMAGED DURING CONSTRUCTION.
- 4. DIMENSIONS INDICATED  $\pm$  ARE EXISTING CONDITION DIMENSIONS TO BE VERIFIED IN FIELD.

## **DEMOLITION KEY NOTES:**

- 1 REMOVE EXISTING WALL MOUNTED LIGHT BOX, RETAIN FOR OWNER.
- 2 REMOVE EXISTING CEILING SYSTEM TO ALLOW THE INSTALLATION OF ELEC. OR MECH. WORK. LIGHTS WILL BE REINSTALLED.
- 3 EXISTING IR MACHINE, REMOVED BY SIEMENS.
- 4 REMOVE CEILING SYSTEM COMPLETE.
- 5 REMOVE FLOORING COMPLETE, PREPARE FOR INSTALLATION OF REPLACEMENT.
- 6 REMOVE ALL ACCESSORIES PRIOR TO PAINTING AND RETURN TO OWNER.
- 7 REMOVE EXISTING UNISTRUT SYSTEM AT CEILING COMPLETE.
- 8 REMOVE PORTION OF EXISTING SLAB TO ACCOMMODATE 3 \(\frac{1}{4}\)"x 12" FLOOR DUCT, REFER TO SIEMENS FINAL INSTALLATION DRAWINGS FOR EXACT LOCATIONS.

3/ aug 12

9 REMOVE EXISTING EQUIPMENT ANCHOR BOLTS COMPLETE, PATCH CONCRETE SLAB LEVEL WITH ADJACENT EXISTING.

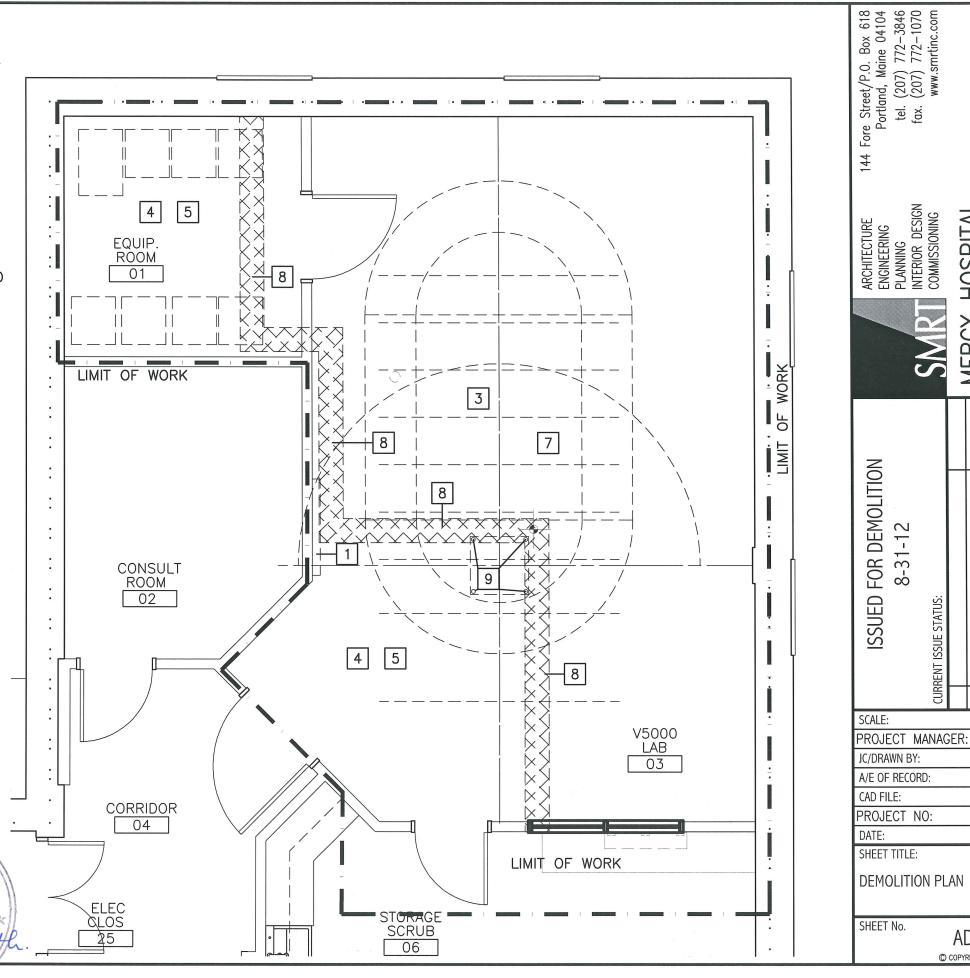

**EPLACEMENT** 

2

SPIT/ ENT

MERCY HOS
IR EQUIPME
PORTLAND, MAINE

1/4"=1'-0"

AE100-12076

AD100


COPYRIGHT 2012 SMRT IN

MDR

KD

12076

8-31-12

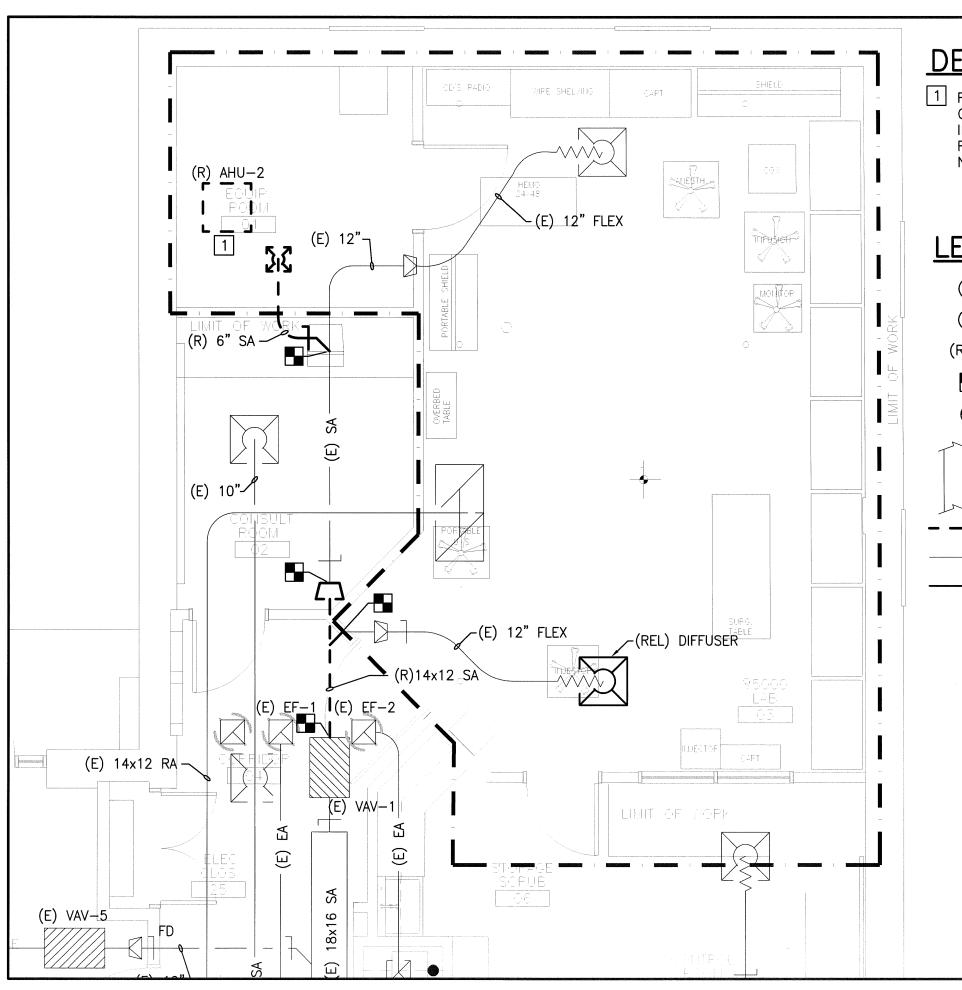

## **DEMOLITION KEY NOTES:**

REMOVE FAN COIL, ASSOCIATED PIPING CONTROLS, AND CONDENSING UNIT ON ROOF IN ITS ENTIRETY. RE-CLAIM REFRIGERANT AS REQUIRED. PREPARE CONDENSATE DRAIN FOR NEW FAN COIL UNITS.

#### **ABBREVIATIONS** EGEND -

(E) **EXISTING** 

(R) **REMOVE** 

(REL) RELOCATE

LIMIT OF REMOVAL

CONNECT TO EXISTING

MEDICAL VACUUM INLET MEDICAL AIR OUTLET

**DEMOLITION** 

**EXISTING** 

NEW

144 Fore Street/P.O. Box 618
Portland, Maine 04104
tel. (207) 772-3846
fax. (207) 772-1070
www.smrtinc.com ARCHITECTURE
ENGINEERING
PLANNING
INTERIOR DESIGN
COMMISSIONING ISSUED FOR DEMOLITION 8-31-12

REPLACEMENT

ERCY HOSPITAL EQUIPMENT R

SCALE: 1/4"=1'-0" WITE OF MANAGEMENT DATE PROJECT MANAGER: IC/DRAWN BY: MBD A/E OF RECORD: KD CAD FILE: MD100-12076 PROJECT NO: 12076


8-31-12

SHEET TITLE:

DATE:

HVAC DEMOLITION PLAN

MD100 C COPYRIGHT 2012 SMRT INC

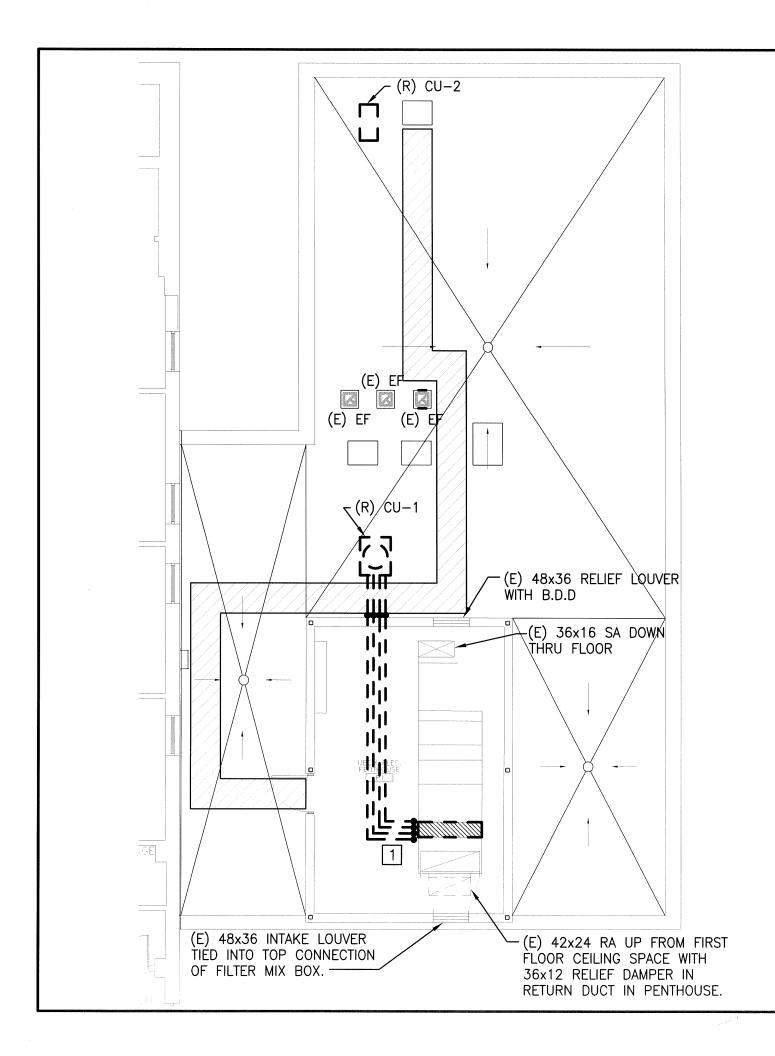

## **DEMOLITION KEY NOTES:**

REMOVE EXISTING DX COIL, ASSOCIATED PIPING, AND CONDENSING UNIT IN ITS ENTIRETY. RECLAIM REFRIGERANT AS REQUIRED.

## **LEGEND-ABBREVIATIONS**

(E) **EXISTING** 

(R) REMOVE

(REL) RELOCATE

LIMIT OF REMOVAL


CONNECT TO EXISTING

MEDICAL VACUUM INLET MEDICAL AIR OUTLET

**DEMOLITION** 

**EXISTING** 

NEW

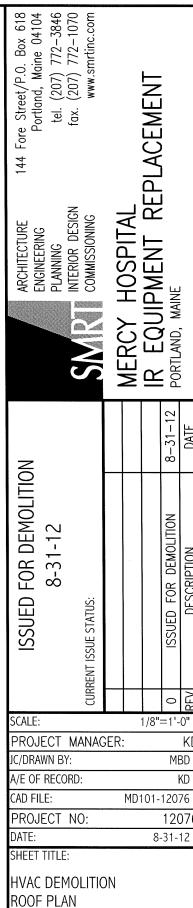



KD

MD101

C COPYRIGHT 2012 SMRT INC



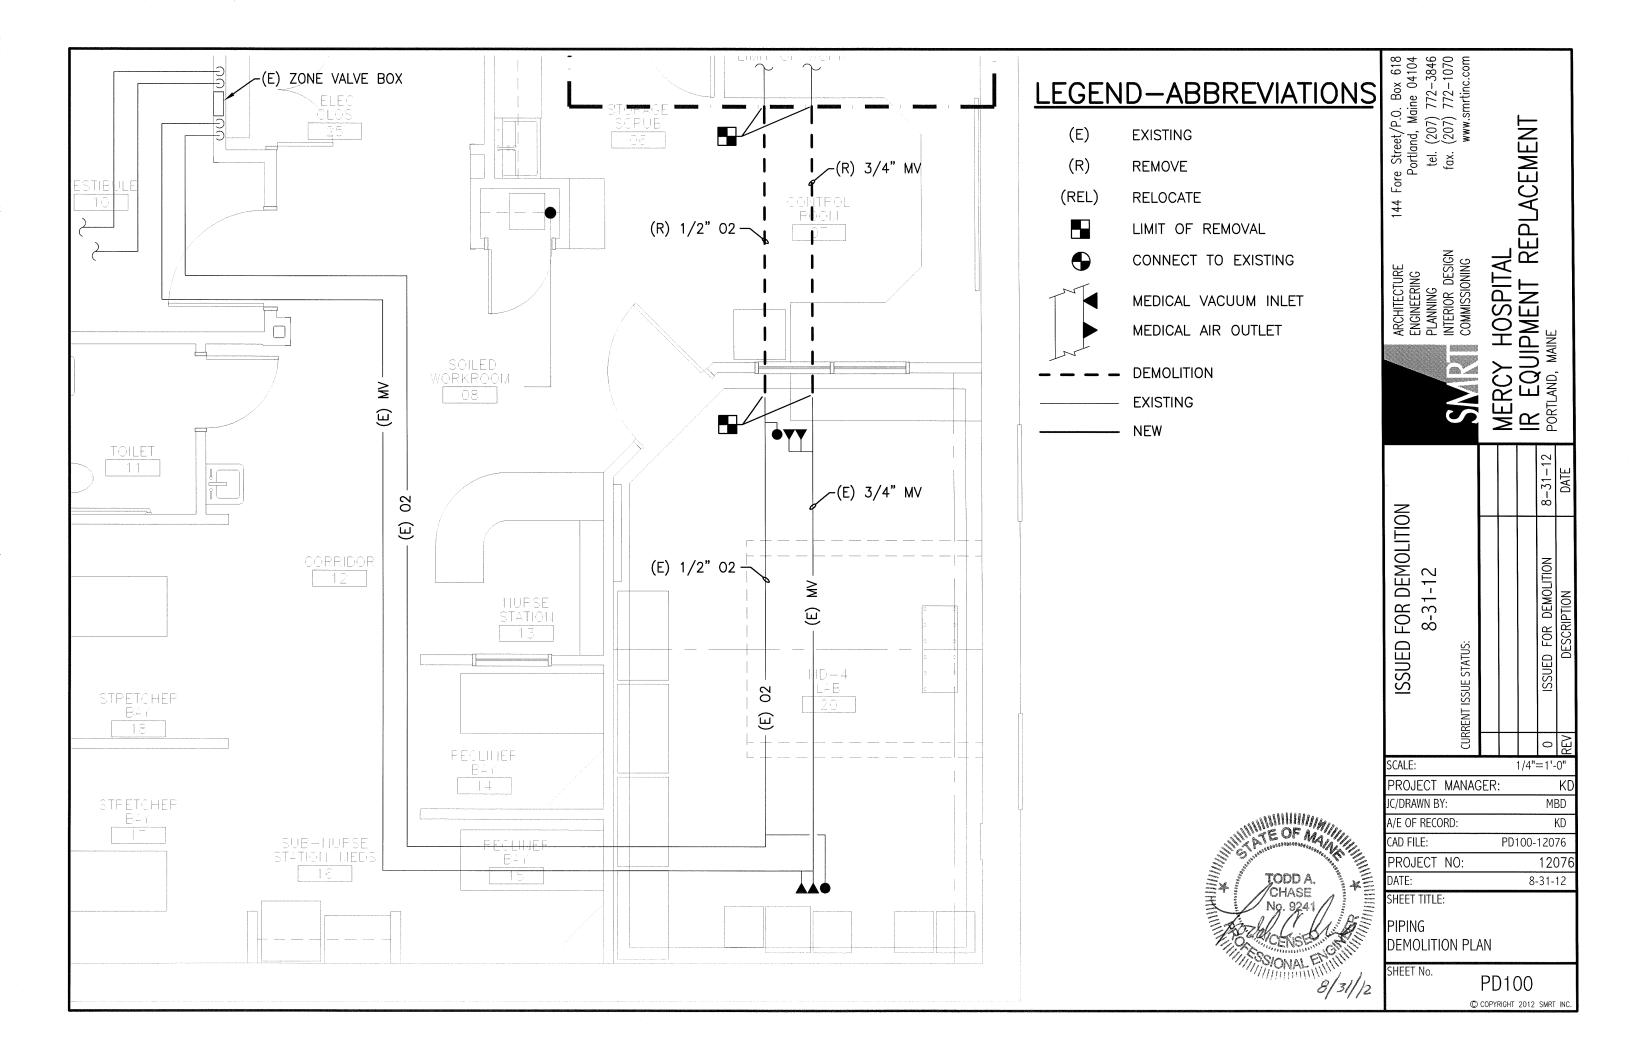

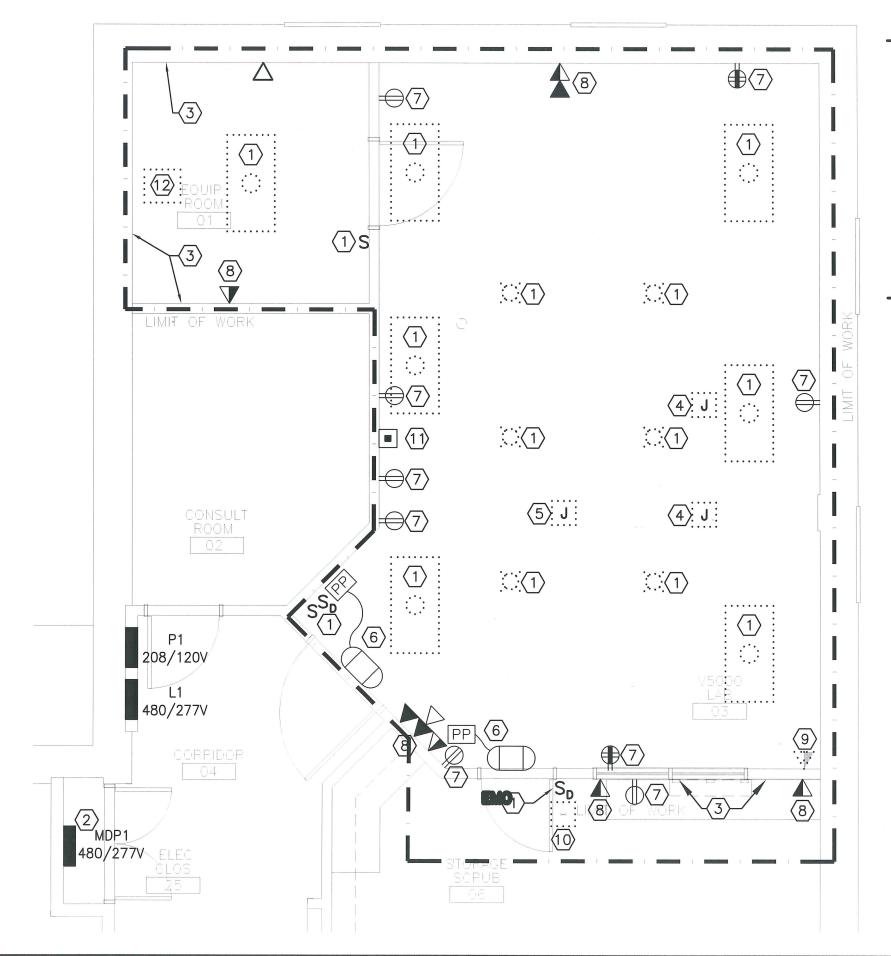

## **GENERAL NOTES:**

- 1. SEE SHEET E-001 FOR LEGEND AND GENERAL NOTES.
- 2. REMOVE FEEDER TO CONDENSING UNIT CU-2
  BACK TO SOURCE. REMOVE CONNECTION AT
  CONDENSING UNIT CU-1, FEEDER REMAINS FOR
  REUSE. SEE MECHANICAL DRAWING MD-101
  FOR LOCATIONS.

## **KEYED NOTES:**

- REMOVE FIXTURES AND SWITCHES. LIGHTING CIRCUIT TO REMAIN.
- REMOVE FEEDER SERVING EXISTING "ALLURA" EQUIPMENT. 125A BREAKER TO REMAIN FOR REUSE UNDER NEW WORK.
- REMOVE WIRE TROUGH, JUNCTION BOXES AND CONDUITS ASSOCIATED WITH IMAGING EQUIPMENT.
- REMOVE CEILING JUNCTION BOXES AND CONDUITS ASSOCIATED WITH IMAGING EQUIPMENT.
- REMOVE FLOOR JUNCTION BOX, FLOOR TROUGH AND CONDUITS ASSOCIATED WITH IMAGING EQUIPMENT.
- 6 EXISTING DOOR OPERATORS REMAIN.
- 7) EXISTING RECEPTACLES REMAIN.
- (8) EXISTING TELE/DATA REMAINS.
- (9) REMOVE TELE/DATA JACK AND CABLES.
- 10 REMOVE EXISTING EMERGENCY OFF BUTTON.
- 11) CODE BLUE BUTTON REMAINS.
- 12 REMOVE FEEDER TO AHU-2 BACK TOUROURCE

Fore Street/P.O. Box 618
Portland, Maine 04104
tel. (207) 772-3846
fax. (207) 772-1070
www.smrtinc.com

144

OR DESIGN SSIONING PITAI

MERCY HOSPITAL IR EQUIPMENT REPLACEMENT PORTLAND, MAINE

z Z					DATE
ISSUED FOR DEMOLITION 8-31-12	CURRENT ISSUE STATUS:				NOITGIGOSTI
	E E				2
CALE.			1/4	'=1'	-0

 SCALE:
 1/4"=1'-0"

 PROJECT MANAGER:
 KD

 JC/DRAWN BY:
 CDS

 A/E OF RECORD:
 WRH

 CAD FILE:
 E-E100-12076

 PROJECT NO:
 12076

 DATE:
 8-31-12

SHEET TITLE:

**ELECTRICAL DEMOLITION PLAN** 

SHEET No.

E-100
© COPYRIGHT 2012 SMRT INC