



# CONSIGLI

Est. 1905

## Letter of Transmittal

**To:** John Nolan  
Titan Mechanical, Inc. (ME)  
232 Riverside Industrial Prkwy  
Portland, ME 04103  
Ph: (207)878-5223 / Fax: (207)878-5235  
jnolan@titanmech.com

**Transmittal #:** 201

**Date:** 6/12/2013

**Job:** 1150 Hyatt Place - Portland

**Subject:** Submittal 230000 - 001-003 - Gas Fire Boilers (APP)

**WE ARE SENDING YOU**

<input type="checkbox"/> Attached	<input type="checkbox"/> Under separate cover via the following items:
<input type="checkbox"/> Shop drawings	<input type="checkbox"/> Prints
<input type="checkbox"/> Copy of letter	<input type="checkbox"/> Change order
<input type="checkbox"/> Plans	<input type="checkbox"/> Samples
<input type="checkbox"/> Specifications	<input checked="" type="checkbox"/> Submittal

Document Type	Copies	Date	No.	Description
Submittal	1	6/12/13	230000-001 Rev 0	P/D: Viessmann Vitrocrossal 200 Gas Fired Boiler (Para 2.7) Status: Approved
Submittal	1	6/12/13	230000-002 Rev 0	P/D: Boiler Controls Status: Approved
Submittal	1	6/12/13	230000-003 Rev 0	P/D: Boiler Accessories Status: Approved

**THESE ARE TRANSMITTED as checked below:**

- |   |   |   |
|---|---|---|
| <input type="checkbox"/> For approval           | <input checked="" type="checkbox"/> Approved as submitted | <input type="checkbox"/> Resubmit ___ copies for approval   |
| <input type="checkbox"/> For your use           | <input type="checkbox"/> Approved as noted                | <input type="checkbox"/> Submit ___ copies for distribution |
| <input type="checkbox"/> As requested           | <input type="checkbox"/> Returned for corrections         | <input type="checkbox"/> Return ___ corrected prints        |
| <input type="checkbox"/> For review and comment | <input type="checkbox"/> Other                            |   |
| <input type="checkbox"/> FOR BIDS DUE           | <input type="checkbox"/> PRINTS RETURNED AFTER LOAN TO US |   |

**Remarks:**

**Copy To:**

**Signature:** Darlene Guay - CONSIGLI CONST. CO., INC. - ME

If enclosures are not as noted, kindly notify us at once.

Page 1 of 1



- |   |  |
|---|--|
| <input checked="" type="checkbox"/> NO EXCEPTIONS TAKEN | <input type="checkbox"/> SUBMIT SPECIFIED ITEM |
| <input type="checkbox"/> MAKE CORRECTIONS NOTED         | <input type="checkbox"/> REJECTED-SEE REMARKS  |
| <input type="checkbox"/> AMEND & RE-SUBMIT              | <input type="checkbox"/> SEE COMMENTS BELOW    |

CHECKING IS ONLY FOR GENERAL CONFORMANCE WITH THE DESIGN CONCEPT OF THE PROJECT AND GENERAL COMPLIANCE WITH THE INFORMATION GIVEN IN THE CONTRACT DOCUMENTS. ANY ACTION SHOWN IS SUBJECT TO THE REQUIREMENTS OF THE DRAWINGS AND SPECIFICATIONS. CONTRACTOR IS RESPONSIBLE FOR DIMENSIONS WHICH SHALL BE CONFIRMED AND CORRELATED AT THE JOB SITE, FABRICATION PROCESSES AND TECHNIQUES OF CONSTRUCTION, COORDINATION OF THE WORK WITH THAT OF OTHER TRADES AND THE SATISFACTORY PERFORMANCE OF THE WORK.

**Stephen P. Doel**  
SIGNATURE

**6/12/13**  
REVIEW DATE

**Project: Hyatt Place Portland Hotel**

**Submittal: 230000 - 001-003 - Gas Fired Boilers**

**Comments: NONE**



**Titan Mechanical, Inc.** *Design Build Engineering • Mechanical Contracting • Service*

232 Riverside Industrial Parkway • Portland, ME 04103 • Ph 207.878.5223 • Fax 207.878.5235

P.O. Box 103 • Newport, ME 04953 • Ph 207.368.2503 • Fax 207.368.2395

## **CERTIFICATE OF COMPLIANCE**

### **SUBMITTAL**

**Project Name:** Hyatt Hotel

**Project Location:** Portland, Maine

**Project Number:** Job # 13-241

**General Contractor:** Consigli Construction

**Sub-Contractor:** Titan Mechanical

**Submittal Supplied By:** Viessmann Boiler

**Item:** Boilers

**Specification Section:** 23000 – 2.7

**Reviewed By:** John Nolan

**Date:** 5/22/13

**Initials:** JPN

**This Submission contains variations from Contract Documents**

**This Submission does not contain any variations from the Contract Documents**

## Product Submittal



Project: Hyatt

Location:

### Index:

#### ▶ Boilers and Burners

Vitocrossal 200, CM2-246 Gas-fired Condensing Boiler (Qty. of 2)

#### ▶ Boiler Controls

Vitocontrol-S Digital Cascade Control (Qty. of 1)

Vitotronic 100, GC1 Digital Boiler Control (Qty. of 2)

#### ▶ System Accessories

Neutralization System, Model N-70 (Qty. of 1)



# CONSIGLI

Est. 1905

## Submittal

**Job:** 1150  
 Hyatt Place - Portland  
 433 Fore Street  
 Portland, ME 04101

**Spec Section No:** 230000  
**Submittal No:** 001  
**Revision No:** 0  
**Sent Date:** 6/11/2013  
**Due Date:** 6/24/2013

**Spec Section Title:** HVAC System

**Submittal Title:** P/D: Viessmann Vitrocrossal 200 Gas Fired Boiler (Para 2.7)

**Contractor:**  
 Consigli Construction Co., Inc.


<b>Consigli Construction Co., Inc.</b> <small>Contractor's Stamp</small> 15 Franklin Street - Portland, ME 04101	
<input checked="" type="checkbox"/> Approved for A/E Review	<input type="checkbox"/> Revise & Resubmit
<input type="checkbox"/> Approved as Noted for A/E Review	<input type="checkbox"/> Rejected
Spec. Section <b>230000</b>	Submittal No. <b>001</b>
Date <b>6/11/2013</b>	By <b>Matt Hossfeld</b>
<p>If so marked, approval is given for design only. It does not relieve the subcontractor from complying with the requirements of the contract, contract drawings and specifications. The subcontractor shall be responsible for all dimensions, quantities, schedules and field conditions.</p>	

**Architect:**  
 Canal5Studio  
 Hart, Tim

Architect's Stamp

Engineer / Government / Other Approval

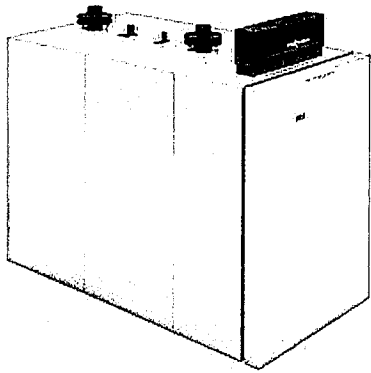



## Boiler Data



### VITOCROSSAL 200

#### CM2 Series

Full product manuals:

-  Technical Data Manual
-  Installation Instructions
-  Operating Instructions
-  Service Instructions

#### 1.0 Technical Data for CM2-246

<b>Input *1</b>	878 MBH	257 kW
<b>Minimum input *1</b>	175 MBH	51 kW
<b>Output *2</b>	851 MBH	249 kW
<b>Net AHRI rating</b>	740 MBH	217 kW
<b>Combustion efficiency *2</b>	95 %	
<b>Thermal efficiency *2</b>	97 %	
<b>Overall dimensions</b>		
Overall length (e)	73 inches	1852 mm
Overall width (c) including insulation	36½ inches	930 mm
Overall height (a) including control unit	66 inches	1676 mm
<b>Concrete boiler base</b>		
Length	40 inches	1005 mm
Width	31 inches	800 mm
Thickness	4 inches	100 mm
<b>Weight</b>		
Boiler body	536 lbs	243 kg
Complete with burner, control & thermal insulation	759 lbs	344 kg
<b>Boiler water content</b>		
Heat exchanger surface water cooled	77 USG	292 L
<b>Heat exchanger surface water cooled</b>	90.4 sq. ft.	8.4 sq. m
<b>Max. operating temperature</b>	190 °F	88 °C
<b>Max. operating pressure</b>	75 psig	517 kpa
<b>Boiler connections</b>		
Boiler supply (BS) and return (BR) ANSI flanges	2½ inches	65 mm
Safety supply	1¼ inches	32 mm
Boiler drain	1 inch	
Condensate drain	¾ inch	
<b>Vent pipe</b>		
Internal diameter	8 inches	201 mm
<b>Flue gas values</b>		
Temperature (at a return temperature of 86°F / 30°C)		
– At rated input	132 °F	55 °C
– At partial load	95 °F	35 °C

Temperature (at a return temperature of 140°F / 60°C)

- At rated input	167 °F	75 °C
------------------	--------	-------

**Mass flow rate of flue gas**

- At rated input	785 lbs/h	356 kg/h
- At partial load	262 lbs/h	119 kg/h

<b>Pressure at boiler flue outlet at rated input</b>	0.28 " w.c.	70 Pa
--	-------------	-------

**Notes:**

\*1 For high altitude installations (5,000 to 10,000 ft.), the input will have an altitude de-rating of 15% for 5,000 ft. and 18% for 10,000 ft.

\*2 Tested to AHRI, BTS-2000 Testing Standard Method to Determine Efficiency of Commercial Heating Boilers.

### 1.1 Technical Data for Cylinder Burner for CM2-246

<b>Burner version</b>	Modulating	
<b>Voltage</b>	120 V	
<b>Frequency</b>	60 Hz	

**Power consumption**

- At maximum input	278 Watts	
- At minimum input	52 Watts	

**Dimensions**

Length	17¾ inches	450 mm
Total length	23½ inches	595 mm
Length with burner hood	20 inches	510 mm
Width	21¾ inches	550 mm
Height	19 inches	480 mm

**Weight**

Burner with combination valve & burner hood	74 lbs	33.5 kg
---	--------	---------

**Minimum gas supply pressure**


Natural gas	4 " w.c.	996 Pa
Liquid propane gas	10 " w.c.	2491 Pa

**Maximum gas supply pressure**

Natural gas	14 " w.c.	3487 Pa
Liquid propane gas	14 " w.c.	3487 Pa

<b>Gas connection</b>	1¼ inch NPT	
-----------------------	-------------	--

1.2 Dimensional Drawings

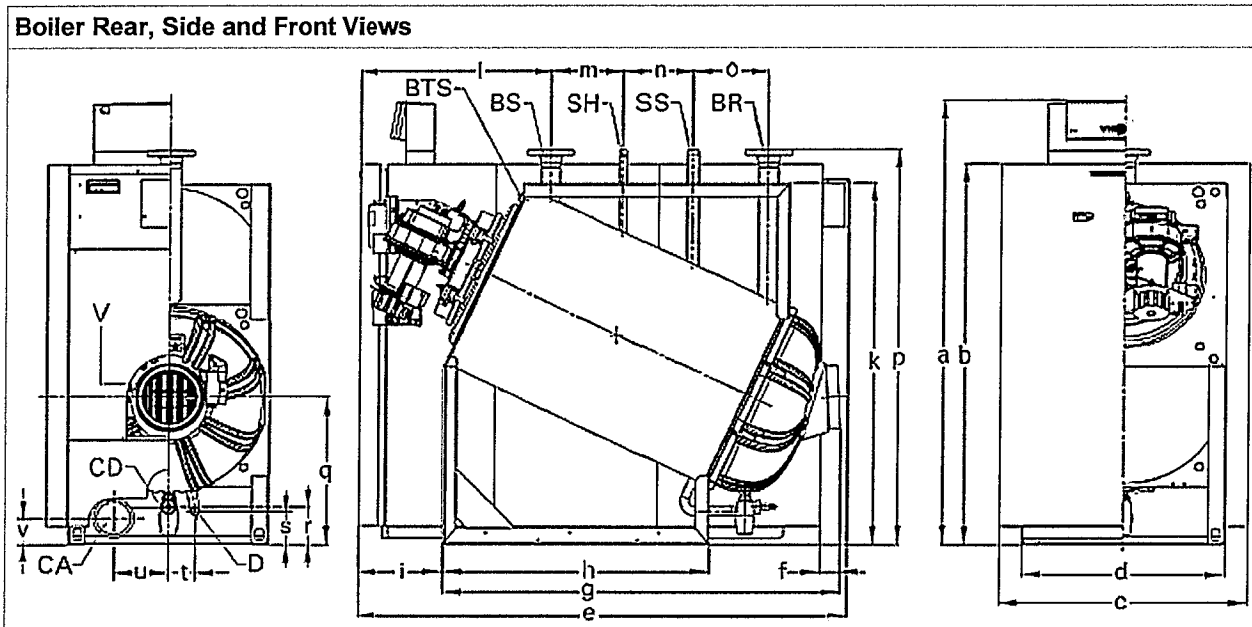

**Dimensions**

a	66"	1676 mm
b	56½"	1438 mm
c	36½"	930 mm
d	30"	760 mm
e	73"	1852 mm
f (flue pipe projection at the back)	3"	75 mm
g	59"	1500 mm
h (foot length)	39½"	1005 mm
i (distance from front face of cover to front supporting foot)	12¾"	323 mm
k	53¾"	1365 mm
l (distance from front face of cover to centre of boiler supply connection)	28¾"	729 mm
m	10¾"	275 mm
n	10"	255 mm
o	11¼"	284 mm
p	58¾"	1493 mm
q	22"	558 mm
r	5½"	142 mm
s	5"	126 mm
t	4"	100 mm
u	8"	207 mm
v	4"	100 mm

**Legend**


BR	Boiler return
BS	Boiler supply
BTS	Boiler water temperature sensor
CA	Combustion air pipe connection
CD	Condensate drain
D	Drain
SH	Female connection ½ in. for pressure gage
SS	Safety supply; pressure relief valve, air vent, low water cut-off
V	Vent pipe connection



### 1.3 Minimum Clearances

Clearances to Combustibles	
Top	0" / 0 mm
Sides	0" / 0 mm
Flue	As per vent manufacturer's specifications
Front	0" / 0 mm
Floor	Combustible

### Recommended Minimum Service Clearances

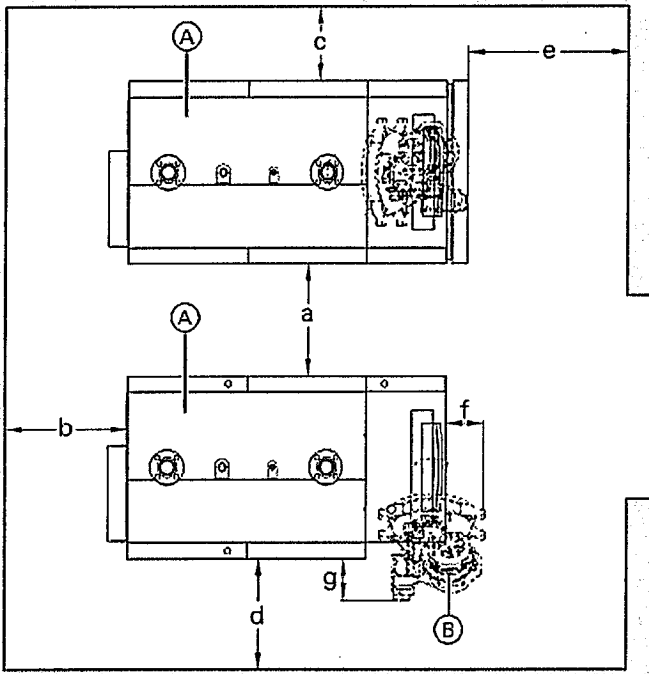

#### Dimensions


a *1	20"	500 mm
b *2	30"	760 mm
c	20"	500 mm
d	20"	500 mm
e	24"	600 mm
f	22"	550 mm
g	15½"	395 mm

- \*1 Can be zero clearance, if serviceability and burner swing position is not required.
- \*2 Clearance for vent pipe installation.

#### Legend

- (A) Boiler
- (B) Burner

1.4 Waterside Flow

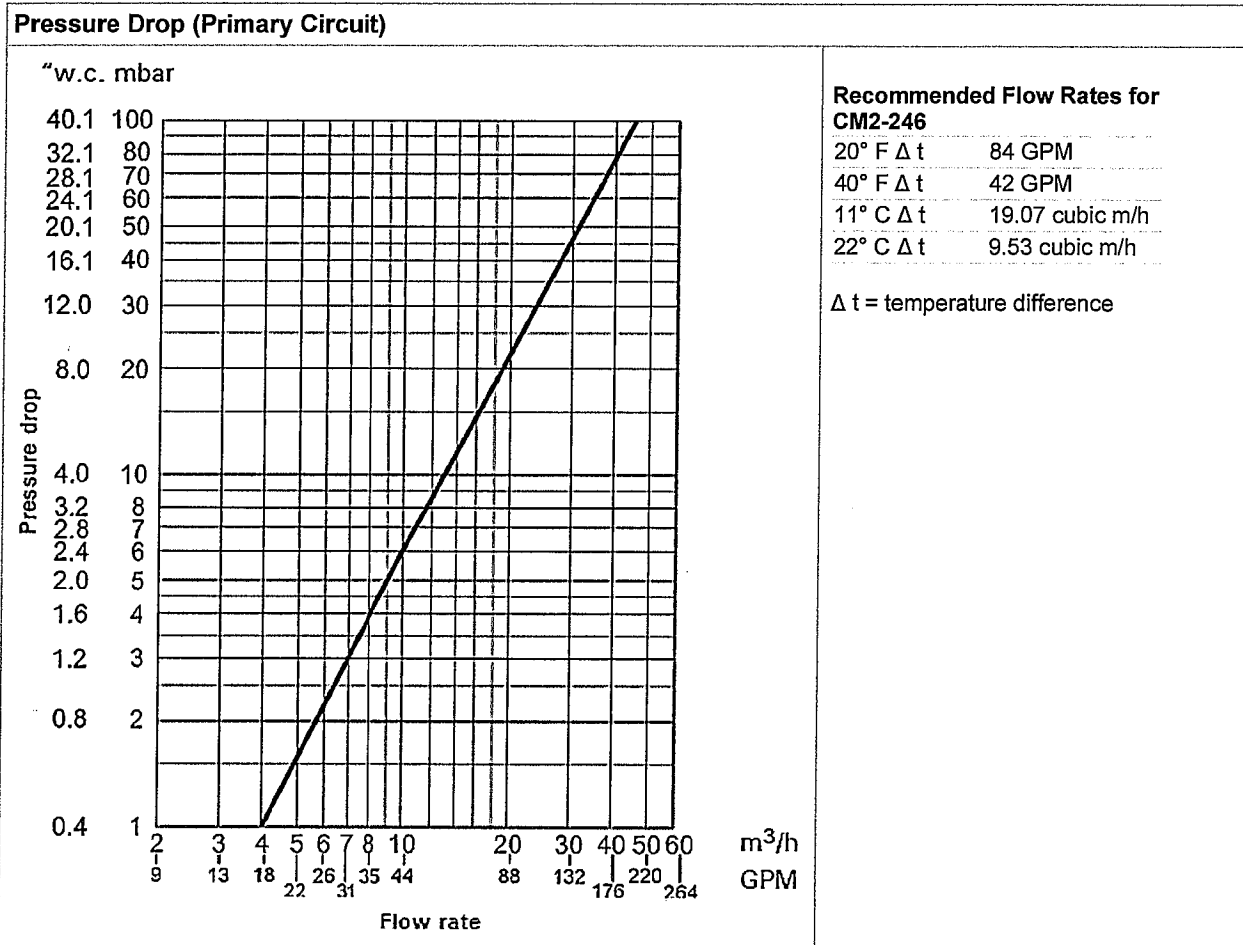



# CONSIGLI

Est. 1905

## Submittal

**Job:** 1150  
 Hyatt Place - Portland  
 433 Fore Street  
 Portland, ME 04101

**Spec Section No:** 230000  
**Submittal No:** 002  
**Revision No:** 0  
**Sent Date:** 6/11/2013  
**Due Date:** 6/24/2013

**Spec Section Title:** HVAC System  
**Submittal Title:** P/D: Boiler Controls

**Contractor:**  
 Consigli Construction Co., Inc.


<b>Consigli Construction Co., Inc.</b> 15 Franklin Street - Portland, ME 04101	
<input checked="" type="checkbox"/> Approved for A/E Review <input type="checkbox"/> Revise & Resubmit <input type="checkbox"/> Approved as Noted for A/E Review <input type="checkbox"/> Rejected	
Spec. Section	230000
Submittal No.	002
Date	6/11/2013
By	Matt Hossfeld
<p>If so marked, approval is given for design only. It does not relieve the subcontractor from complying with the requirements of the contract, contract drawings and specifications. The subcontractor shall be responsible for all dimensions, quantities, schedules and field conditions.</p>	

**Architect:**  
 Canal5Studio  
 Hart, Tim

Architect's Stamp

Engineer / Government / Other Approval

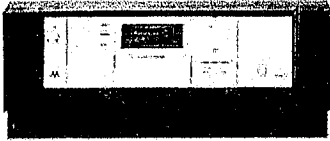

## Control Data



### VITOCONTROL-S

#### MW1 Series

Full product manuals:

-  Installation and Service Instructions
-  Operating Instructions

## 1.0 Product Description

Digital cascade control with outdoor-reset logic for use in multi-boiler systems in conjunction with Vitotronic 100 GC1.

## 1.1 Technical Data


Rated voltage	120 VAC
Rated frequency	60 Hz
Rated current	6 A ~
Power consumption	10 W
Safety class	I
Protection	IP 20 D to EN 60529, safeguard through design and installation
Function	Type 1B to EN 60730-1

### Permissible ambient temperature


- During operation	32 to 104°F
Installation in living accommodation and boiler rooms (normal ambient conditions)	0 to 40°C
- During storage and transport	-4 to 149°F
	-20 to 65°C

## 1.2 Control Diagrams

### Wiring Diagrams

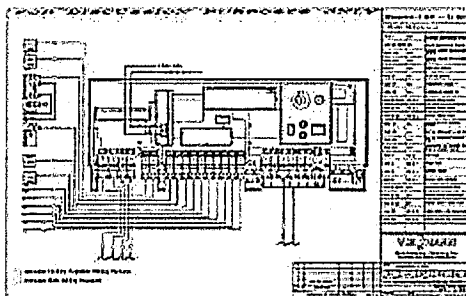


[View full-sized PDF drawing](#)

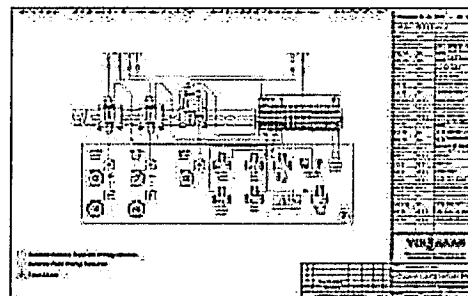

[View full-sized PDF drawing](#)

**Summary of Electrical Connections**

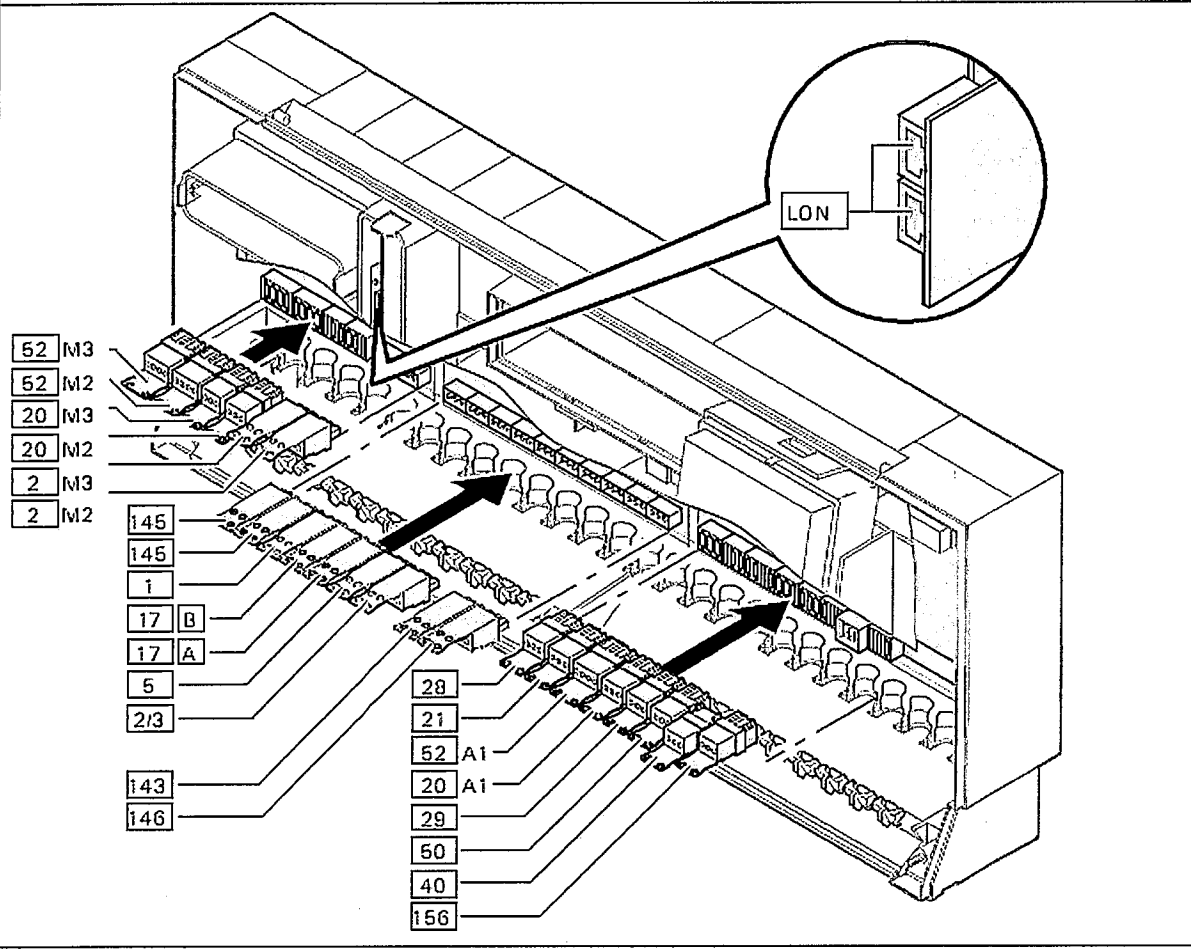

**Mixing Valve Extension Circuit Board**

- 2 M2/M3 Supply temperature sensor
- 20 M2/M3 Heating circuit pump
- 52 M2/M3 Mixing valve actuator

**Low Voltage Motherboard**

- 1 Outdoor temperature sensor
- 2 Common supply temperature sensor
- 5 DHW tank temperature sensor
- 17A Temperature sensor T1 (accessory)
- 17B Temperature sensor T2 (accessory)
- 143 Connection
- 145 KM BUS
- 146 Connection for external equipment
- LON LON BUS, interconnecting cable for data transfer between control units

**Line Voltage Motherboard**

- 20A1 Heating circuit pump
- 21 DHW pump
- 28 DHW re-circulation pump
- 29 Shunt pump or boiler circuit pump
- 40 Power supply connection
- 50 Compiled failure alarm
- 52A1 Three-way return valve
- 156 Internal power supply for mixing valve extension circuit board and connections for accessories

## Control Data



---



### VITOTRONIC 100

#### GC1 Series

Full product manuals:

-  Installation and Service Instructions
-  Operating Instructions



### 1.0 Product Description

Digital boiler control unit for use in: single-boiler systems; multi-boiler systems in conjunction with Vitocontrol-S, VD2/CT3; or multi-boiler systems with an external master control.


### 1.1 Technical Data

Rated voltage	120 VAC
Rated frequency	60 Hz
Rated current	2 x 6 A ~
Power consumption	10 W
Safety class	I
Protection	IP 20 D to EN 60529, safeguard through design and installation
Function	Type 1B to EN 60730-1
<b>Fixed high limit</b>	
– On Vitotronic 100, GC1 for Vitocrossal 300	Factory set to 210°F / 99°C
– On Vitotronic 100, GC1 for Vitorond 200	Factory set to 230°F / 110°C Adjustable to 210°F / 99°C
<b>Adjustable high limit</b>	
	Factory set to 203°F / 95°C Adjustable to 212°F / 100°C
<b>Permissible ambient temperature</b>	
– During operation	32 to 104°F
Installation in living accommodation and boiler rooms (normal ambient conditions)	0 to 40°C
– During storage and transport	-4 to 149°F -20 to 65°C

1.2 Control Diagrams

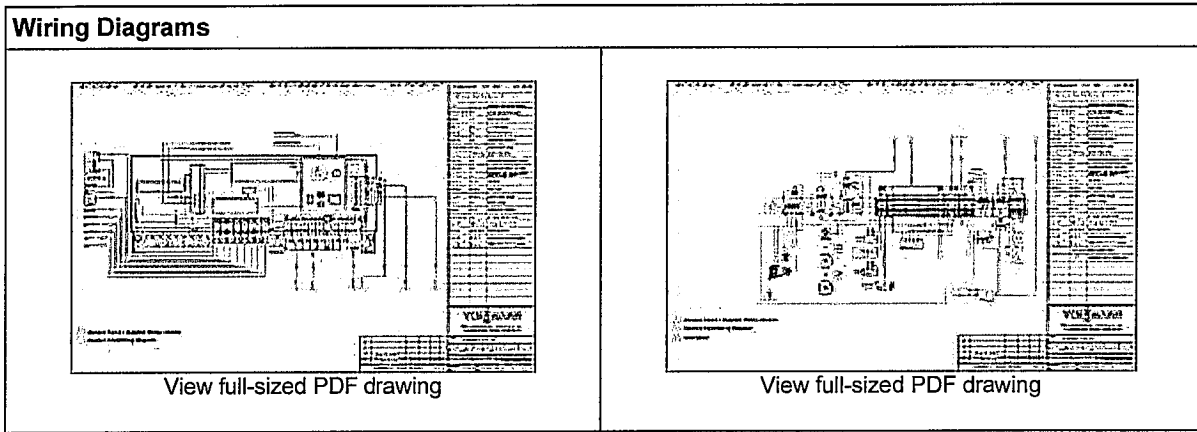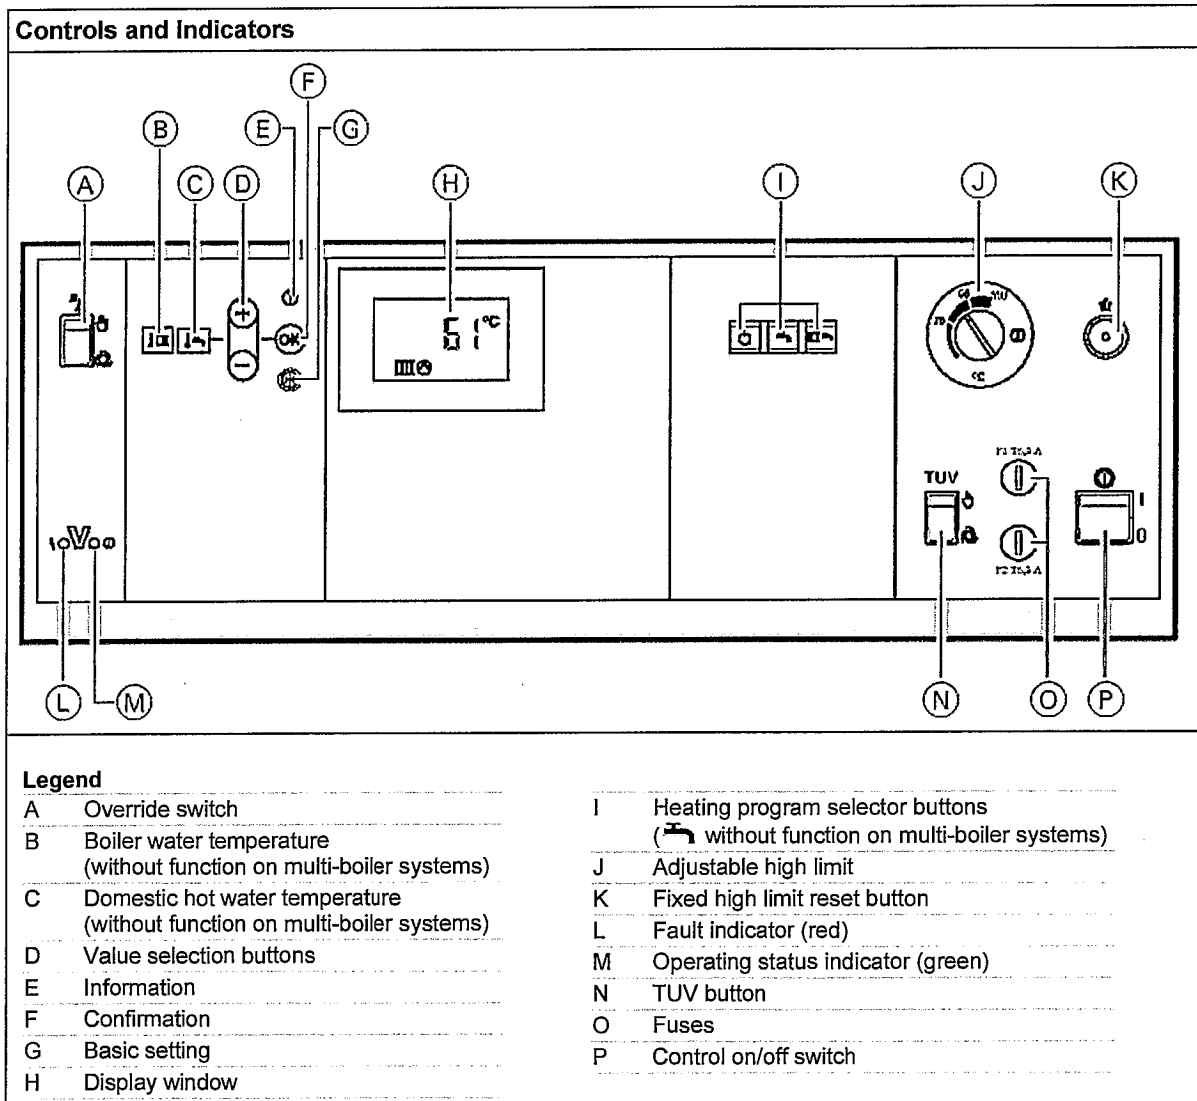

**Summary of Electrical Connections**

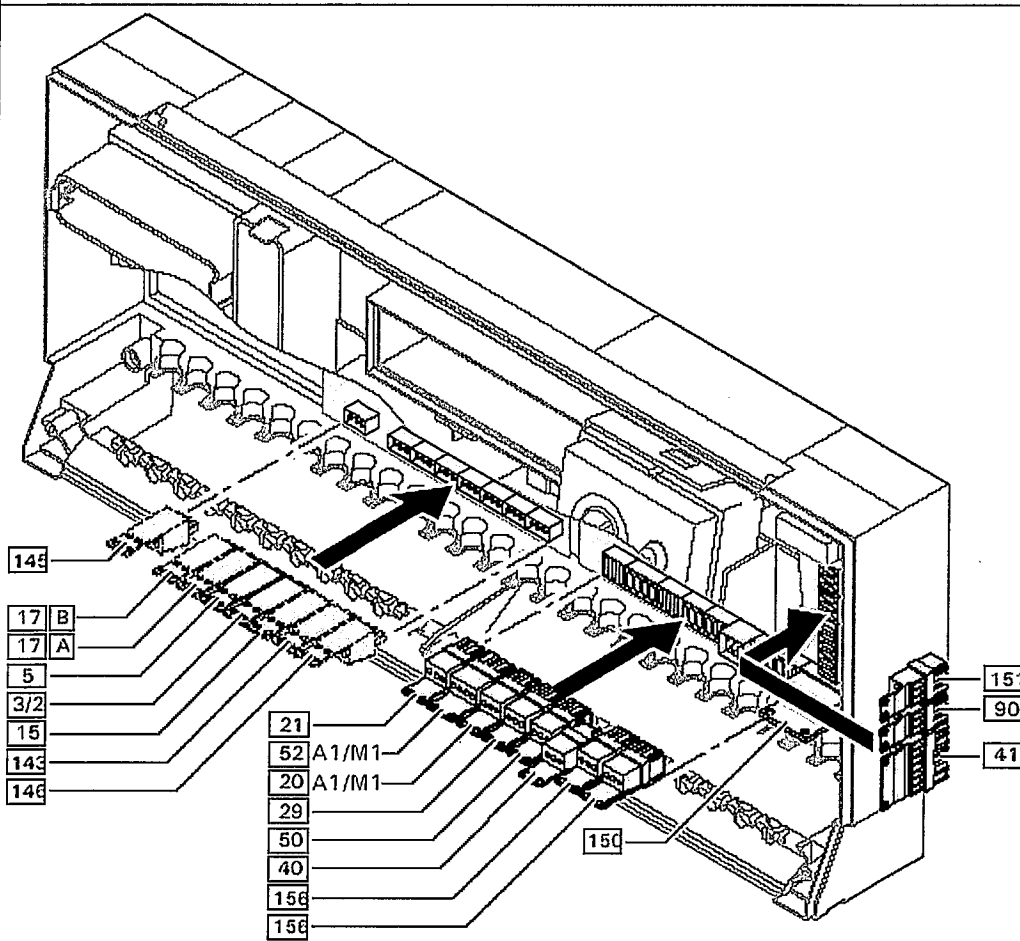

**Low Voltage Connections (Motherboard)**

3	Boiler temperature sensor
5	No function
15	Flue gas temperature sensor (accessory)
17A	Therm-Control temperature sensor or return temperature sensor T1 (accessory)
17B	Return temperature sensor T2 (accessory)
143	External connection
145	KM BUS participant, e.g. plug-in adaptor for external safety equipment
146	External connection

**Line Voltage Connections (Motherboard)**

20A1	DHW recirculation pump or switched output
21	No function
29	Shunt pump (on site) or boiler circuit pump (on site)
40	Power connection
41	Burner (burner stage 1)
50	Central fault message
52A1	Isolation valve or actuator for 3-way mixing valve for return temperature control
90	Burner (burner stage 2 / mod.)
150	External connections, e.g. supplementary safety equipment
151	Safety circuit, potential free
156	Power supply for accessories





# CONSIGLI

Est. 1905

## Submittal

**Job:** 1150  
 Hyatt Place - Portland  
 433 Fore Street  
 Portland, ME 04101

**Spec Section No:** 230000  
**Submittal No:** 003  
**Revision No:** 0  
**Sent Date:** 6/11/2013  
**Due Date:** 6/24/2013

**Spec Section Title:** HVAC System  
**Submittal Title:** P/D: Boiler Accessories

**Contractor:**  
 Consigli Construction Co., Inc.


<b>Consigli Construction Co., Inc.</b> Contractor's Stamp 15 Franklin Street - Portland, ME 04101	
<input checked="" type="checkbox"/> Approved for A/E Review <input type="checkbox"/> Revise & Resubmit <input type="checkbox"/> Approved as Noted for A/E Review <input type="checkbox"/> Rejected	
Spec. Section	230000
Submittal No.	003
Date	6/11/2013
By	Matt Hossfeld
If so marked, approval is given for design only. It does not relieve the subcontractor from complying with the requirements of the contract, contract drawings and specifications. The subcontractor shall be responsible for all dimensions, quantities, schedules and field conditions.	

**Architect:**  
 Canal5Studio  
 Hart, Tim

Architect's Stamp

Engineer / Government / Other Approval

## System Accessories Data

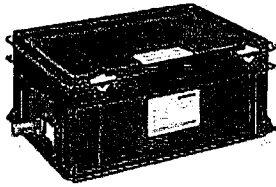

### Neutralization System

Grünbeck N-70

#### 1.0 Product Description

Refillable neutralization unit with granular pellets designed to neutralize aggressive condensate produced by gas-fired condensing boilers. The neutralized condensate released by the unit will be non-corrosive, with a safe pH value of above 6.5.

#### 1.1 Technical Data for Model N-70

Neutralization capacity (max.)	18.5 USG/hr	70 L/hr
--------------------------------	-------------	---------

##### Compatible boiler models

Vitocrossal 300	All models	
Vitodens 200-W	WB2B 45, 60, 80, 105	

##### Connections

Inlet/outlet hose – nominal diameter	¾ inch	20 mm
--------------------------------------	--------	-------


##### Dimensions

Length	18¾ inches	476 mm
Width	11¾ inches	300 mm
Height	7¾ inches	185 mm
Shipping weight	29.8 lbs	13.5 kg




##### Temperature ranges

Condensate water temperature	41 to 104 °F	5 to 60 °C
Ambient temperature	41 to 104 °F	5 to 60 °C

#### 1.2 Dimensional Drawings

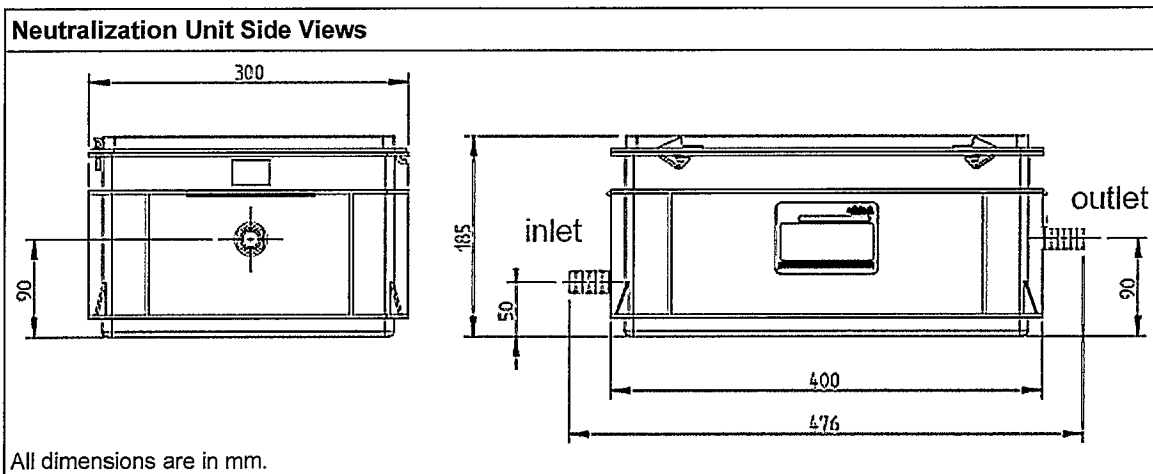

### 1.3 Diagrams

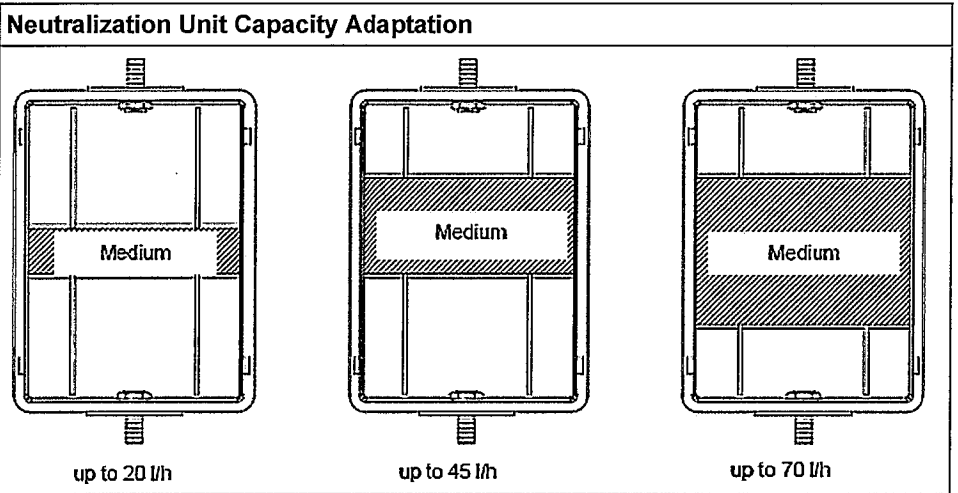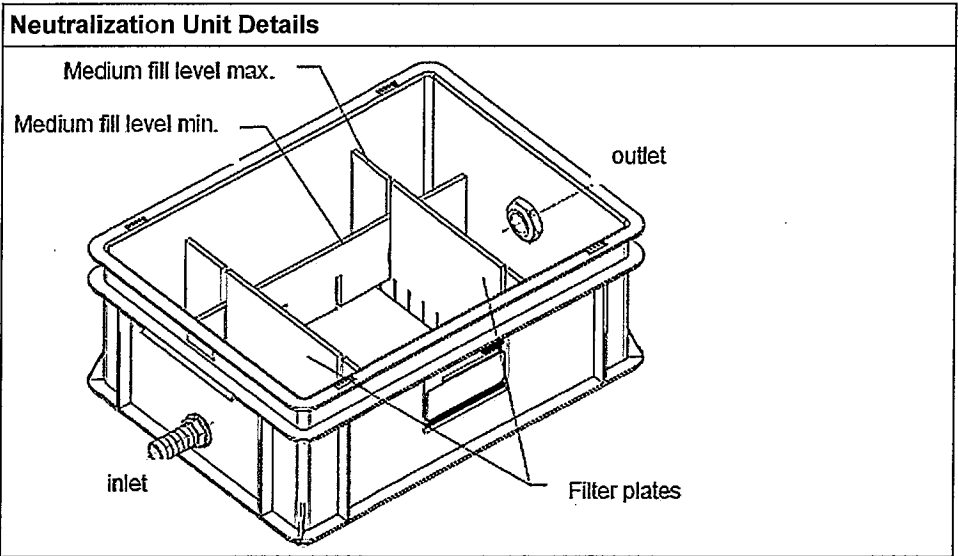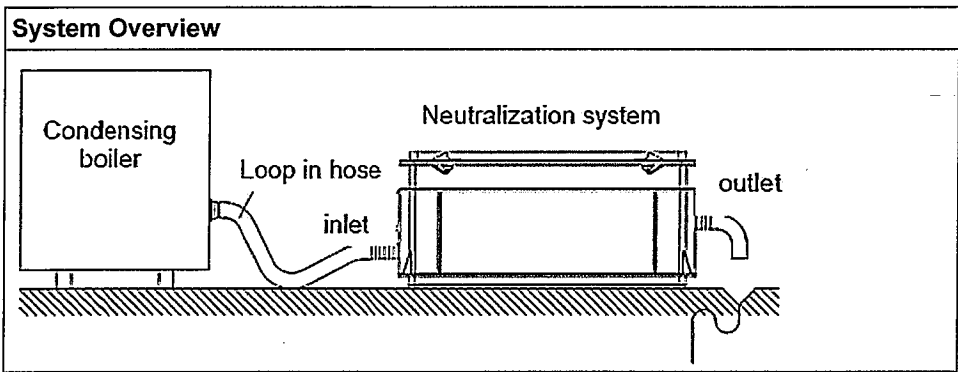

Technical information subject to change without notice. Viessmann reserves the right to correct errors in graphics, files, text and technical data. Some product may not be exactly as illustrated.

© Viessmann Manufacturing Company Inc. All rights reserved.

Viessmann is a trademark of Viessmann Werke GmbH & Co. KG, and is registered with the U.S. Patent and Trademark Office. For further copyright, trademark and disclaimer information, please visit: [www.viessmann.ca/en/copyright.html](http://www.viessmann.ca/en/copyright.html)

**Versatronik® NR2/BACIP**  
Communication Gateway



COMMUNICATION

---

## Technical, Installation and Configuration Information

---

### Cautionary Statement

The information presented in this document is only to be used by those familiar with its application and use.



C US LR 102874

<b>IMPORTANT</b>
------------------

Read and save these instructions for future reference

## About these instructions



Take note of all symbols and notations intended to draw attention to potential hazards or important product information. These include "WARNING", "CAUTION" and "IMPORTANT". See below.



### WARNING

Indicates an imminently hazardous situation which, if not avoided, could result in death, serious injury or substantial product/property damage.

→ Warnings draw your attention to the presence of potential hazards or important product information.



### CAUTION

Indicates an imminently hazardous situation which, if not avoided, may result in minor injury or product/property damage.

→ Cautions draw your attention to the presence of potential hazards or important product information



### CAUTION

Static sensitive components may be damaged by improper handling or work within the control. Ensure all possible measures are taken to eliminate build-up of static electricity.

→ Helpful hints for installation, operation or maintenance which pertains to the product.

### IMPORTANT

## Trademark Information

Echelon®, LON®, LONWORKS®, iLON®, LNS®, LONMARK®, Neuron®, and the LonUsers logo are trademarks of Echelon Corporation registered in the United States and other countries.

Viessmann® and Vitotronic® are trademarks of Viessmann Werke GmbH & Co KG registered in the United States and other countries.



BACnet® is a registered trademark of the American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc., 1791 Tullie Circle NE, Atlanta, GA 30329.

For more information please visit:

[www.bacnet.org](http://www.bacnet.org)  
[www.ashrea.org](http://www.ashrea.org)

## Important Regulatory and Installation Requirements

### Codes

The installation of this unit must be in accordance with local codes.

All electrical wiring is to be done in accordance with the latest edition of CSA C22,1 Part 1 and/ or local codes. In the U.S. use the National Electrical Code ANSI/NFPA 70.

The installing contractor must comply with the Standard of Controls and Safety Devices for Automatically fired Boilers, ANSI/ASME CSD-1 where required by the authority having jurisdiction.

### Working on the equipment

The installation, adjustment, service and maintenance of this unit must be done by a licensed professional heating contractor or persons who are qualified and experienced in the installation, service, and maintenance of similar products. There are no user serviceable parts on this control.

### Power supply

Install power supply in accordance with the regulation of the authorities having jurisdiction or in absence of such requirements, in accordance with National Codes.

→ Please carefully read this manual prior to attempting installation. Any warranty is null and void if these instructions are not followed.

→ The completeness and functionality of field supplied electrical controls and components must be verified by those installing the device



### WARNING

More than one live circuit. See wiring diagram in this manual. Turn off power supply to control and damper/blower before servicing. Contact with live electrical components can result in serious injury or death

## Purpose of Device and Operation

The Versatronik 505 NR2/BACIP gateway provides a communication translation between Viessmann Vitotronic NR2 Commercial boiler controls and BACnet enabled BMS systems.

The Versatronik gateway may be either part of a control panel or stand-alone control device.

## Control Information


## Section 2.0

<b>Information</b>	<b>Page</b>
Mounting Versatronic Gateway	5
Connection Overview—Vitocontrol 100/300	6
Connection Overview—Vitocontrol-S, Cascade Control	7
Addressing Rotary Dial Setting	8
Update Participant List	9
Participant Check	10
Configuration of Gateway	11
Analogue Input Overview	14
Multi-state Burner Information	15
Analogue Output Overview	16
Appendix A-Fault Codes	17
Appendix B-Status Information	19
Technical Information	20



## Installation

### Mounting Versatronik Gateway

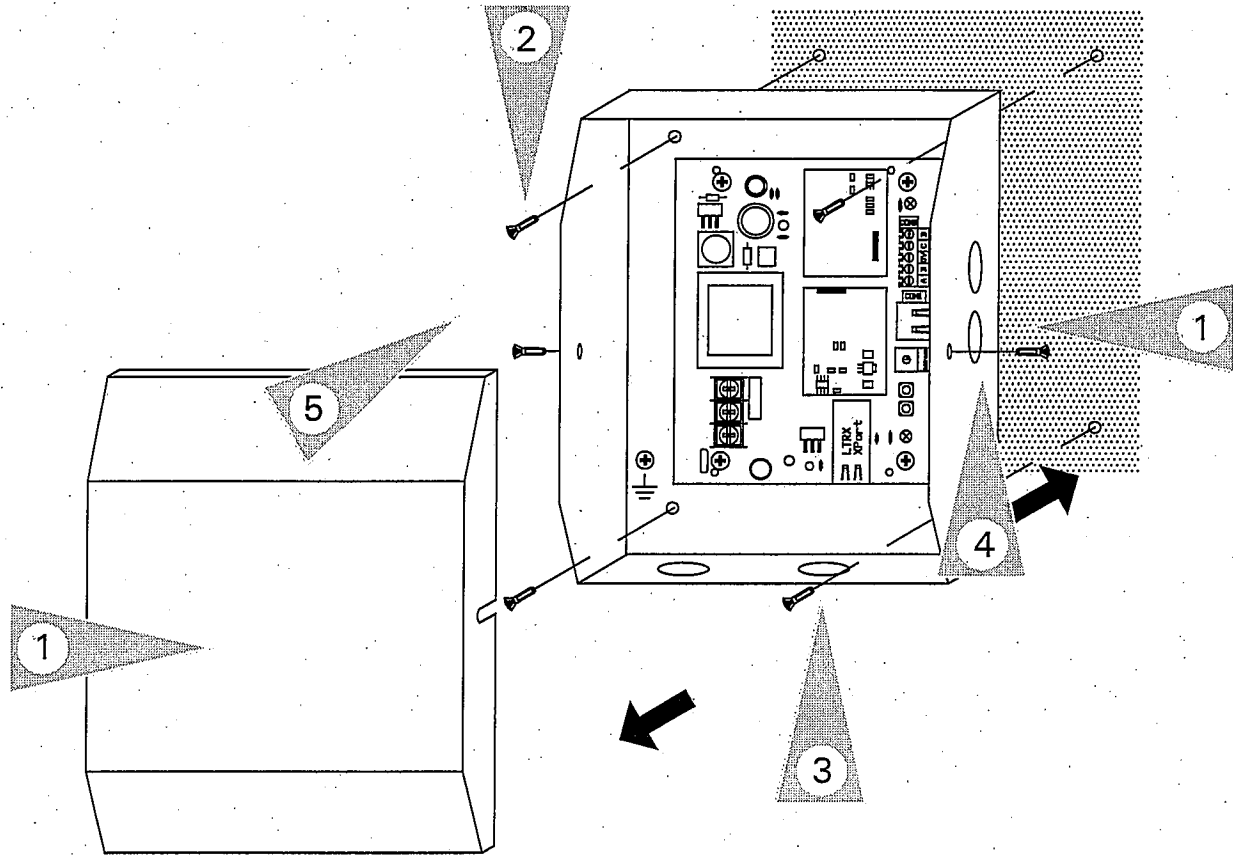

KWE P/N 542 010 Versatronik 505 NRZ/BACIP Gateway V1.2 01/2009 Technical information subject to change without notice

### Wiring Steps

1. Mount Versatronik 505 Gateway in convenient location near Vitocontrol-S, CT3/VD2A control. Remove cover by loosening the two screws on either side of base to release the cover.
2. Fasten base to wall using field-supplied screws/fasteners.
3. Remove knockout and installed wire strain relief or box connector. Removal of remaining knockouts is required to make further connections.
4. Remove knockout on right side for low voltage connections to right side of PCB. Plug-in style connectors are supplied to make connections.
5. Once all of the 120VAC and low voltage connections are complete and verified, reinstall the cover from Step 1.



### WARNING

When extending wire there is the possibility of exposure to electromagnetic interference. Avoid running wires beside or near high voltage 120/240 VAC conductors. If proximity to high voltage conductors cannot be avoided, use stranded, twisted pair of shield design wire. Ensure that only one end of the shielding is grounded.

## Connection Overview


Communication connections—Vitotronic 100, GC1 or 300, GW2

### Connection Overview

Refer to manual specific to control. Detailed information regarding the Extension Output Module connections, coding and set-up to be referenced within.


- 1 Control showing location of LON card and its location within.
- 2 A CAT-5 cable is supplied with the Versatronic 505 Gateway. The RJ45 is plugged into the control and terminates into the gateway.
- 3 Versatronic 505 housing.
- 4 Gateway PCB.
- 5 Second RJ45 socket for connection of BACnetIP to BMS system.
- 6 The LON communication cable from the control is plugged into the Output Module.
- 7 Field-wired incoming power supply for the output module. It requires 120VAC for its operation.

KWE P/N 542 010 Versatronic 505 NR2/BACIP Gateway V1.2 01/2009 Technical information subject to change without notice

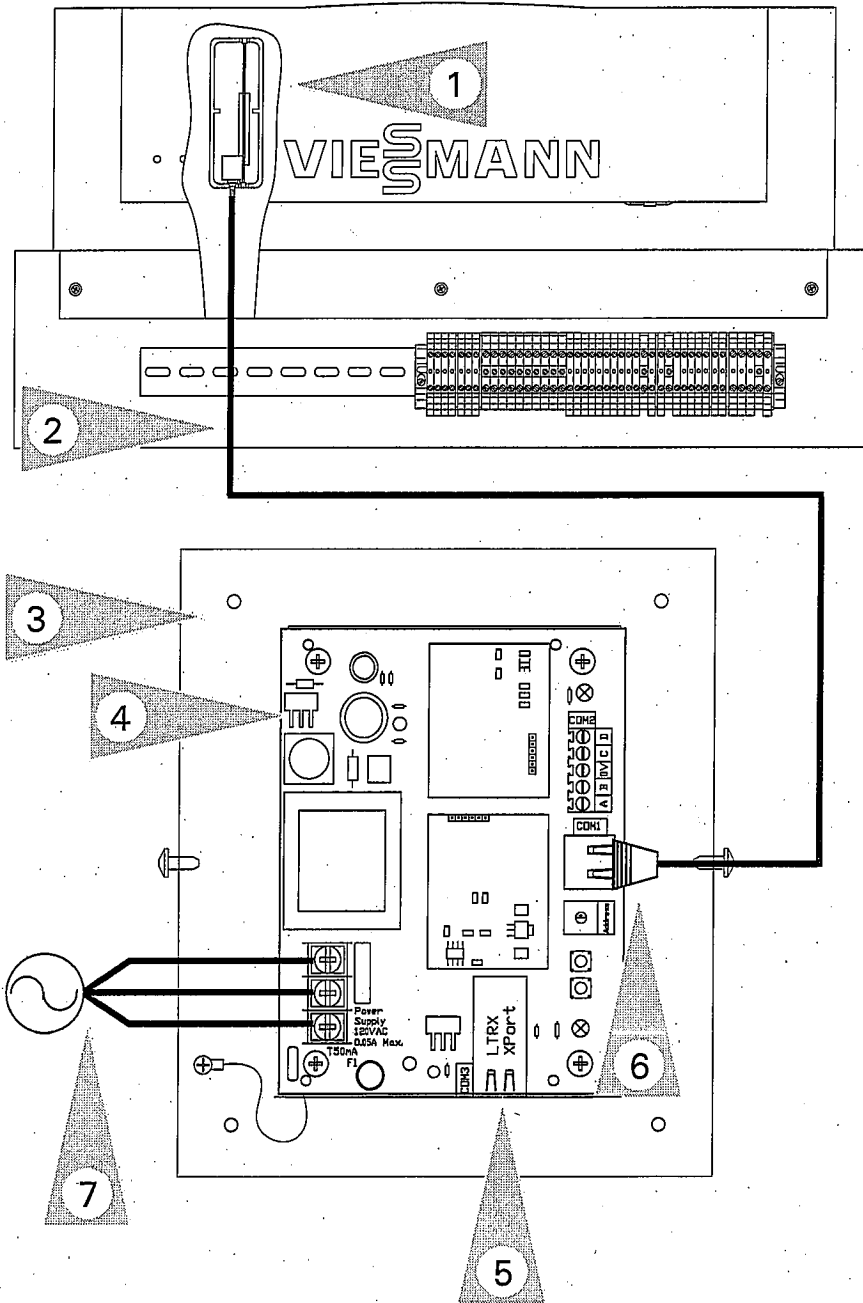

# Connection Overview


## Communication connections—Vitocontrol-S, Cascade Control

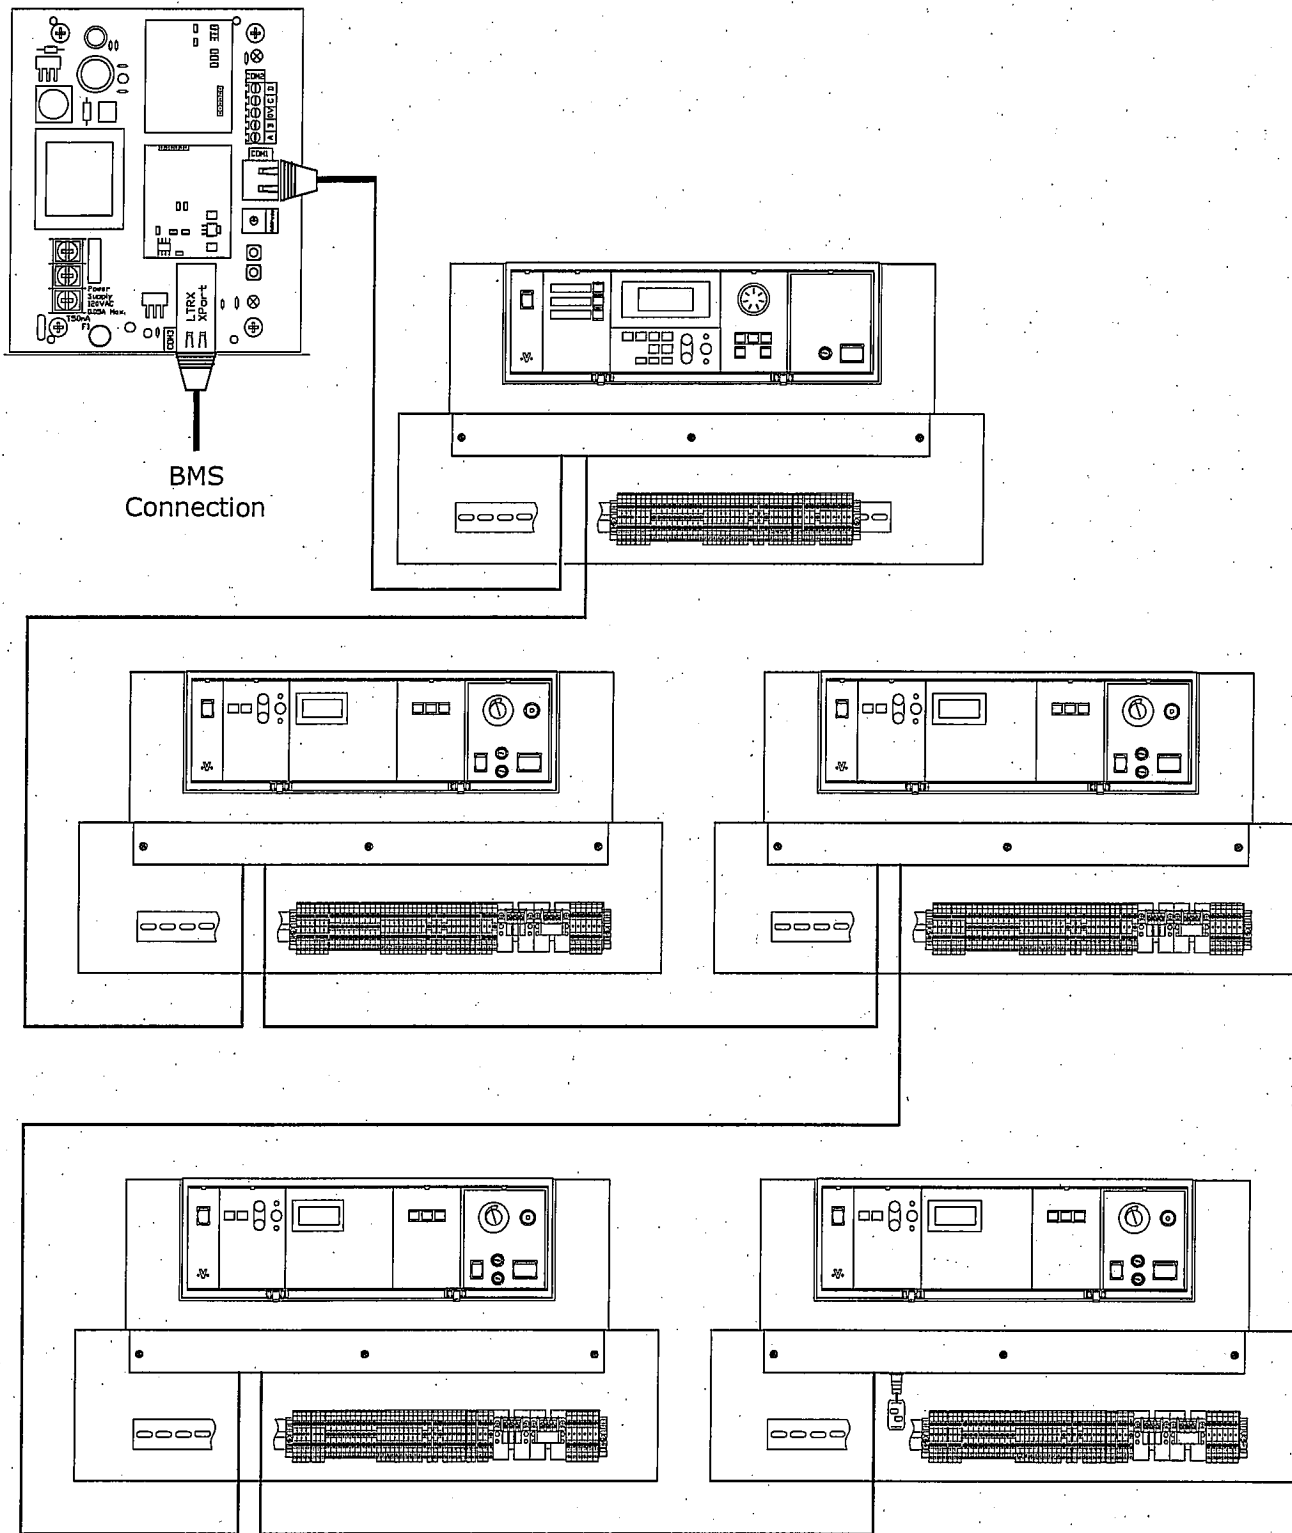

KWIE P/N 542 010 Versatronic 505 NR2/BACIP Gateway V1.2 01/2009 Technical information subject to change without notice

# Versatronik 505 Dial Setting Overview

## Rotary Dial Setting

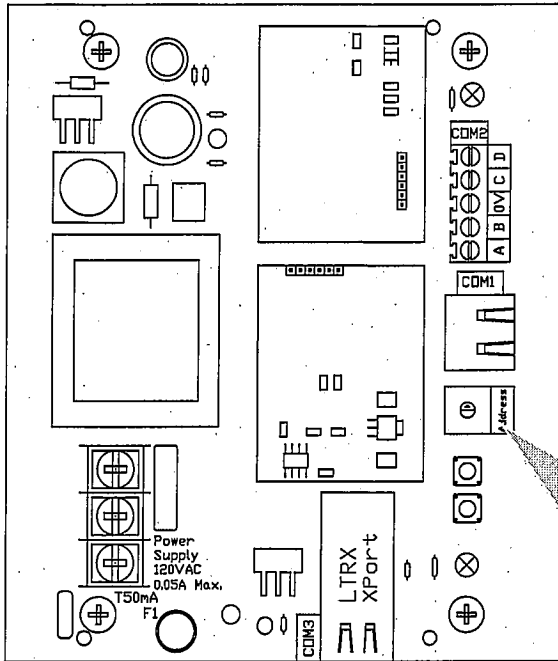


### Setting Overview




1. The rotary dial setting on the Versatronik Gateways provides addressing information for systems that may utilize a number of Versatronik Gateways.

When a second or third or fourth Versatronik 505, BACIP is added to the communications BUS, adjust the rotary dial to reflect correct addressing number.

To ensure functioning communication between devices if a new Versatronik 505 gateway is added, ensure that a Participant Update has been performed.

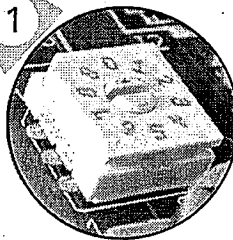

## Update Participant List for Vitocontrol-S, Cascade Control

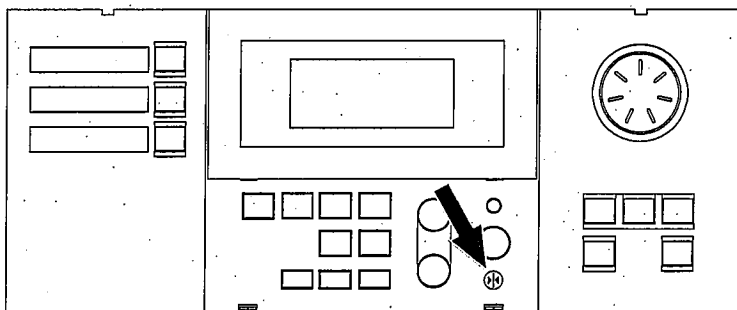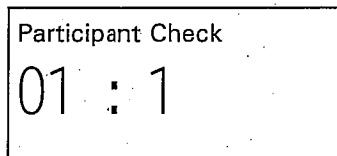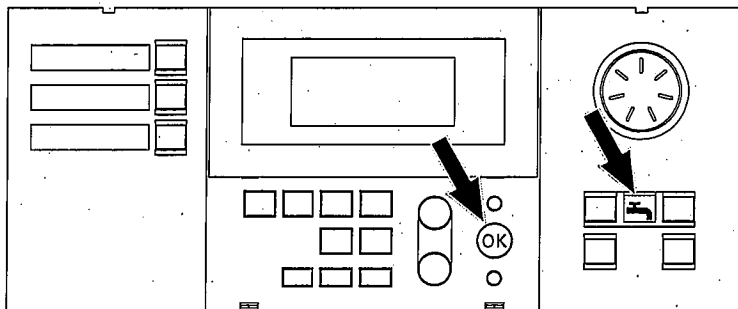

### Participant Update

This is to be carried out after all the communication connections have been completed and the Vitocontrol-S, is coded as the error manager.


#### Requirements:

Vitocontrol-S, must be coded as the error manager (default). Refer to the Vitocontrol-S manual address 79:01.

The LON participant number must be assigned in each of the Versatronik 505 gateway units. Refer to the rotary dial setting and ensure there are no duplicates.



1. Press the faucet and OK buttons simultaneously for approximately 2 seconds. The words Participant Check will appear in the screen.
2. Press the reset button. The participant list will be updated after approximately 2 minutes. The participant check will then be terminated.

## Participant Check Vitocontrol-S, Cascade Control

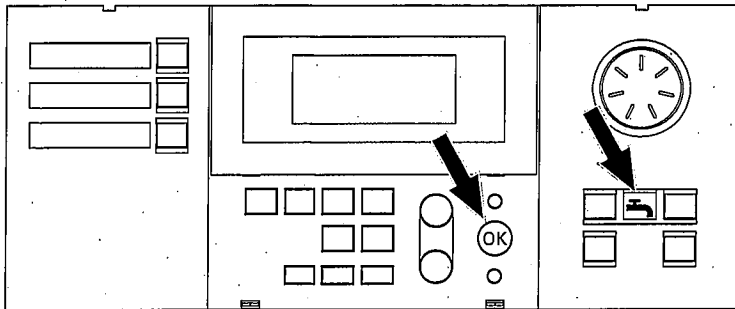

Participant Check

01 : 1

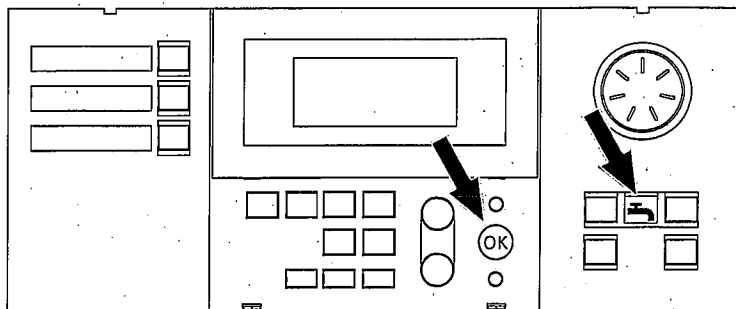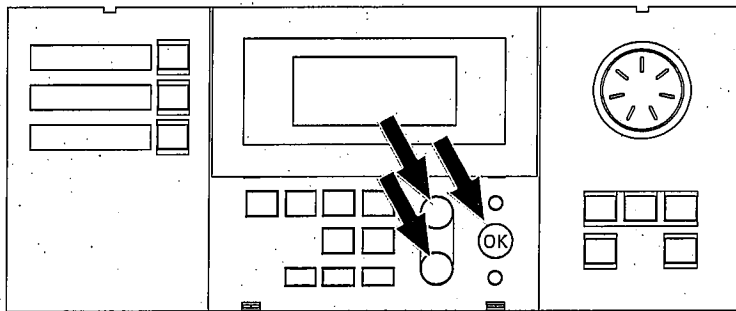

### Participant Check

The participant check is used to confirm communication between the boiler controls and the Vitocontrol-S, system control.

#### Requirements:

Vitocontrol-S, must be coded as the error manager (default). Refer to the Vitocontrol-S manual address 79:01. The LON participant number must be assigned in each of the Versatronik 505 gateway units. Refer to the rotary dial setting and ensure there are no duplicates.

1. Press the faucet and OK buttons simultaneously for approximately 2 seconds. The words Participant Check will appear in the screen.
2. Select the required participant by using the + or - sign.
3. Activate the check with the OK button. If communication between the selected Versatronik 505 gateway and Vitocontrol-S is verified, "Check OK" will appear in the screen. If there is a problem with communication, "Check not OK" will appear. If the check was not successful, verify all wiring between the controls and ensure that the power is turned ON.
4. If the check was successful, select a different user by using the + or - signs. Once selected press OK and repeat the same procedure as outlined in point 3.
5. To exit the check, press the faucet and OK button again for 2 seconds. The participant check is terminated.

## Configuration of Gateway

### Configuring BACnet/IP Settings

Connect your computer DIRECTLY to the BACnet Interface of the gateway device. With no other devices attached (an isolated network). Either set your computer's network connection to automatic IP Address (DHCP), or set your computer's IP address to 192.168.88.90 (subnet mask 255.255.255.0)

Restart the Gateway by cycling the power off and then on again.

Open a browser window and insert the following URL: <http://192.168.88.89/admin>

The default user name / password is "admin" and "admin" (without the quotes). This can be renamed in the Change Password screen. At this point you will see the Configuration pages.

KWE P/N 542 010 Versatronik 505 NR2/BACIP Gateway V1.2 01/2009 Technical information subject to change without notice

### Versatronik 505 NR2/BACIP

• Home	<b>BACnet/IP Settings</b>  This page allows you to view current BACnet/IP settings, to change them or to restore them to factory defaults. <table border="1"><thead><tr><th>Parameter</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>IP</td><td><input type="text" value="192.168.0.22"/></td><td>IP address of the BACnet device.</td></tr><tr><td>Network Mask</td><td><input type="text" value="255.255.255.0"/></td><td>IP subnet mask.</td></tr><tr><td>Default Gateway</td><td><input type="text" value="192.168.0.1"/></td><td>IP address of the default gateway.</td></tr><tr><td>UDP Port</td><td><input type="text" value="47808"/></td><td>BACnet/IP UDP port number.</td></tr></tbody></table> <p><input type="button" value="Save"/> <input type="button" value="Reset"/> <input type="button" value="Defaults"/></p>	Parameter	Value	Description	IP	<input type="text" value="192.168.0.22"/>	IP address of the BACnet device.	Network Mask	<input type="text" value="255.255.255.0"/>	IP subnet mask.	Default Gateway	<input type="text" value="192.168.0.1"/>	IP address of the default gateway.	UDP Port	<input type="text" value="47808"/>	BACnet/IP UDP port number.
Parameter		Value	Description													
IP		<input type="text" value="192.168.0.22"/>	IP address of the BACnet device.													
Network Mask		<input type="text" value="255.255.255.0"/>	IP subnet mask.													
Default Gateway		<input type="text" value="192.168.0.1"/>	IP address of the default gateway.													
UDP Port		<input type="text" value="47808"/>	BACnet/IP UDP port number.													
• BACnet/IP Settings																
• BACnet Device Settings																
• Advanced Settings																
• Restore Defaults																
• Change Password																
• Activate Configuration																
Copyright © 2006-2007 Cimetrics																
v1.2 (EX-28m-b7092-1.2)																

**IMPORTANT:** Make sure that you remember any changes made here.

## Configuration of Gateway Continued

### BACnet Device Settings

You can now reconfigure these settings according to your network requirements. Make sure that you press **SAVE** on every screen where you make changes. The new setting will not take effect until the Activate Configuration screen has been confirmed. These configuration pages can now be accessed through both the 192.168.88.89 Address, as well as the one you have selected.

The BACnet Device Settings screen looks like this:

Versatronik 505 NR2/BACIP																	
<ul style="list-style-type: none"> <li>▪ Home</li> <li>▪ BACnet/IP Settings</li> <li>▪ BACnet Device Settings</li> <li>▪ Advanced Settings</li> <li>▪ Restore Defaults</li> <li>▪ Change Password</li> <li>▪ Activate Configuration</li> </ul>	<h3>BACnet Device Settings</h3> <p>This page allows you to view current BACnet Device settings, to change them or to restore them to factory defaults.</p> <table border="1"> <thead> <tr> <th>Parameter</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Device ID:</td> <td><input type="text" value="1"/></td> <td>BACnet Device Instance Number.</td> </tr> <tr> <td>Object Name:</td> <td><input type="text"/></td> <td>Value of the Device's Object_Name property.</td> </tr> <tr> <td>Description:</td> <td><input type="text"/></td> <td>Value of the Device's Device_Description property.</td> </tr> <tr> <td>Location:</td> <td><input type="text"/></td> <td>Value of the Device's Device_Location property.</td> </tr> </tbody> </table> <p style="text-align: center;"> <input type="button" value="Save"/> <input type="button" value="Reset"/> <input type="button" value="Defaults"/> </p>		Parameter	Value	Description	Device ID:	<input type="text" value="1"/>	BACnet Device Instance Number.	Object Name:	<input type="text"/>	Value of the Device's Object_Name property.	Description:	<input type="text"/>	Value of the Device's Device_Description property.	Location:	<input type="text"/>	Value of the Device's Device_Location property.
Parameter	Value	Description															
Device ID:	<input type="text" value="1"/>	BACnet Device Instance Number.															
Object Name:	<input type="text"/>	Value of the Device's Object_Name property.															
Description:	<input type="text"/>	Value of the Device's Device_Description property.															
Location:	<input type="text"/>	Value of the Device's Device_Location property.															
Copyright © 2006-2007 Cimetrics		v1.2 (EX-28m-b7092-1.2)															

**NOTE:** The **Device ID** must be unique on the entire BACnet internetwork.

The Restore Defaults and Change Password screens are very simplistic. When you select Activate Configuration, it will ask you if you want to **SAVE** your settings. This will then store your new settings and reboot automatically.

You can now join the Gateway to the rest of your network, provided you have not specified a duplicate IP Address. Any Computer on the network should now be able to access these configuration screens.



## Configuration of Gateway Continued

### Configuration of Analog Outputs AO2-AO7

Note: Status Light Operation  
 Flashing=communication  
 ON Solid or Off=no communication

System Examples	Analog Output Configuration Settings					
	AO2	AO3	AO4	AO5	AO6	AO7
Single Vitotronic 100, GC1 Boiler Control	1	0	0	0	0	0
Vitotronic 300, GW2 with 2 Mixing Valves	1	0	0	0	1	3
Vitotronic 300-K, with 2 Vitotronic 100, GC1 (high temp & 1 MV)	1	2	0	0	5	2
Vitotronic 300-K, with 4 Vitotronic 100, GC1 (high temp & 2 MV)	1	2	3	4	5	3
Vitotronic 050/200-H, HK1 Mixing Valve Control	0	0	0	0	10	1
Vitotronic 050/200-H, HK3 Mixing Valve Control	0	0	0	0	10	3

**Note:** Analog output AO7 is a function of AO6. The AO7 setting determines the number of heating circuits of the AO6 control.

The AO2 through to AO6 settings are based on the programmed participant number at address 77 of the controls.

KWE P/N 542 010 Versatronik 505 NRZ/BACIP Gateway V1.2 01/2009 Technical information subject to change without notice

## Analogue Input Overview

### Analogue Inputs

Values which can be read from the Versatronik 505 NR2/BACIP Gateway

Point	Point Description	Unit
AI1	Boiler 1 actual temperature	°C/°F
AI2	Boiler 1 actual return temperature sensor 1	°C/°F
AI3	Boiler 1 actual return temperature sensor 2	°C/°F
AI4	Boiler 1 flue gas actual temperature	°C/°F
AI5	Boiler 1 fault code (Appendix A)	N/A
AI6	Boiler 1 relay state (Appendix B)	N/A
AI7	Boiler 2 actual temperature	°C/°F
AI8	Boiler 2 actual return temperature sensor 1	°C/°F
AI9	Boiler 2 actual return temperature sensor 2	°C/°F
AI10	Boiler 2 flue gas actual temperature	°C/°F
AI11	Boiler 2 fault code (Appendix A)	N/A
AI12	Boiler 2 relay state (Appendix B)	N/A
AI13	Boiler 3 actual temperature	°C/°F
AI14	Boiler 3 actual return temperature sensor 1	°C/°F
AI15	Boiler 3 actual return temperature sensor 2	°C/°F
AI16	Boiler 3 flue gas actual temperature	°C/°F
AI17	Boiler 3 fault code (Appendix A)	N/A
AI18	Boiler 3 relay state (Appendix B)	N/A
AI19	Boiler 4 actual temperature	°C/°F
AI20	Boiler 4 actual return temperature sensor 1	°C/°F
AI21	Boiler 4 actual return temperature sensor 2	°C/°F
AI22	Boiler 4 flue gas actual temperature	°C/°F
AI23	Boiler 4 fault code (Appendix A)	N/A
AI24	Boiler 4 relay state (Appendix B)	N/A
AI25	Zone/Cascade/Boiler Outdoor temperature	°C/°F
AI26	Zone/Cascade/Boiler Relay State (Appendix B)	N/A
AI27	Zone/Cascade/Boiler Fault Code (Appendix A)	N/A
AI28	Zone/Cascade/Boiler DHW Set-Point	°C/°F
AI29	Zone/Cascade/Boiler DHW Actual Temperature	°C/°F
AI30	Zone/Cascade/Boiler Zone A1 Supply Set-Point	°C/°F
AI31	Zone/Cascade/Boiler Zone A1 Supply Actual Temperature	°C/°F
AI32	Zone/Cascade/Boiler Zone A1 Actual Return Temperature	°C/°F
AI33	Zone/Cascade/Boiler Zone A1 Curve Shift	°K
AI34	Zone/Cascade/Boiler Zone A1 Curve Slope	N/A

## Analogue Input Overview Continued

### Analogue Inputs

Values which can be read from the Versatronik 505 NR2/BACIP Gateway

AI35	Zone/Cascade/Boiler Zone A1 Curve Room Temp. Normal	°C/°F
AI36	Zone/Cascade/Boiler Zone A1 Curve Room Temp. Reduce	°C/°F
AI37	Zone/Cascade/Boiler Zone M2 Supply Set-Point	°C/°F
AI38	Zone/Cascade/Boiler Zone M2 Supply Actual Temperature	°C/°F
AI39	Zone/Cascade/Boiler Zone M2 Curve Shift	°K
AI40	Zone/Cascade/Boiler Zone M2 Curve Slope	N/A
AI41	Zone/Cascade/Boiler Zone M2 Curve Room Temp. Normal	°C/°F
AI42	Zone/Cascade/Boiler Zone M2 Curve Room Temp. Reduce	°C/°F
AI43	Zone/Cascade/Boiler Zone M3 Supply Set-Point	°C/°F
AI44	Zone/Cascade/Boiler Zone M3 Supply Actual Temperature	°C/°F
AI45	Zone/Cascade/Boiler Zone M3 Curve Shift	°K
AI46	Zone/Cascade/Boiler Zone M3 Curve Slope	N/A
AI47	Zone/Cascade/Boiler Zone M3 Curve Room Temp. Normal	°C/°F
AI48	Zone/Cascade/Boiler Zone M3 Curve Room Temp. Reduce	°C/°F

### Multi-state Burner Information

Point	Point Description	Unit
MI1	Boiler 1 Burner State	*See table below
MI2	Boiler 2 Burner State	*See table below
MI3	Boiler 3 Burner State	*See table below
MI4	Boiler 4 Burner Stage	*See table below

State	Value	State	Value	State	Value
1	Off	5	30%	9	70%
2	Fault	6	40%	10	80%
3	10%	7	50%	11	90%
4	20%	8	60%	12	100%

**Note:** The burner percentage is only a control approximation and does not reflect the actual position. Consult with burner manual or manufacturer for signal output from burner

## Analogue Outputs Overview

### Analogue Outputs

Values which can be read from the Versatronik 505 NR2/BACIP Gateway

Point	Point Description	Unit
AO1	Unit settings - 0 = °C, 1 = °F	N/A
AO2	Boiler 1 LON Address (Configured Value must be set during commissioning)	N/A
AO3	Boiler 2 LON Address (Configured Value must be set during commissioning)	N/A
AO4	Boiler 3 LON Address (Configured Value must be set during commissioning)	N/A
AO5	Boiler 4 LON Address (Configured Value must be set during commissioning)	N/A
AO6	Zone/Cascade/Boiler LON Address (Configured Value must be set during commissioning)	N/A
AO7	Number of Zones on the Zone/Cascade/Boiler (Configured Value must be set during commissioning)	N/A
AO8	Zone/Cascade/Boiler DHW Set-Point	°C/°F
AO9	Zone/Cascade/Boiler Zone A1 Curve Shift	°K
AO10	Zone/Cascade/Boiler Zone A1 Curve Slope	N/A
AO11	Zone/Cascade/Boiler Zone A1 Curve Room Temp. Normal	°C/°F
AO12	Zone/Cascade/Boiler Zone A1 Curve Room Temp. Reduce	°C/°F
AO13	Zone/Cascade/Boiler Zone A1 Supply Set-Point	°C/°F
AO14	Zone/Cascade/Boiler Zone M2 Curve Shift	°K
AO15	Zone/Cascade/Boiler Zone M2 Curve Slope	N/A
AO16	Zone/Cascade/Boiler Zone M2 Curve Room Temp. Normal	°C/°F
AO17	Zone/Cascade/Boiler Zone M2 Curve Room Temp. Reduce	°C/°F
AO18	Zone/Cascade/Boiler Zone M2 Supply Set-Point	°C/°F
AO19	Zone/Cascade/Boiler Zone M3 Curve Shift	°K
AO20	Zone/Cascade/Boiler Zone M3 Curve Slope	N/A
AO21	Zone/Cascade/Boiler Zone M3 Curve Room Temp. Normal	°C/°F
AO22	Zone/Cascade/Boiler Zone M3 Curve Room Temp. Reduce	°C/°F
AO23	Zone/Cascade/Boiler Zone M3 Supply Set-Point	°C/°F

## Fault Codes

### Appendix A—Fault Codes

Error codes for Viessmann control units

Fault code (hex)	Description
00	System without fault
0F	Perform maintenance check-up
10	Short circuit, outdoor temperature sensor
18	Interruption, outdoor temperature sensor
20	Short circuit, supply temperature sensor HC1/system
28	Interruption, supply temperature sensor HC1/system
30	Short circuit, boiler water temperature sensor
38	Interruption, boiler water temperature sensor
40	Short circuit, supply temperature sensor heating circuit 2
41	Short circuit, return temperature sensor heating circuit 2
44	Short circuit, supply temperature sensor heating circuit 3
45	Short circuit, return temperature sensor heating circuit 3
48	Interruption, supply temperature sensor heating circuit 2
49	Interruption, return temperature sensor heating circuit 2
4C	Interruption, supply temperature sensor heating circuit 3
4d	Interruption, return temperature sensor heating circuit 3
50	Short circuit, DHW tank temperature sensor
51	Short circuit, DHW tank temperature sensor 2
58	Interruption, DHW tank temperature sensor
59	Interruption, DHW tank temperature sensor 2
60	Short circuit, return temperature sensor 17
68	Interruption, return temperature sensor 17
70	Short circuit, supply/return temperature sensor 17B
78	Interruption, supply/return temperature sensor 17B
b0	Short circuit, flue gas temperature sensor
b1	Communication fault, programming unit (internal)
b4	Internal fault
b5	Internal fault
b6	Internal fault, invalid hardware recognition
b7	Internal fault, boiler protection coding card
b8	Interruption, flue gas temperature sensor

## Fault Codes Continued

### Appendix A—Fault Codes Continued

Error codes for Viessmann control units

bA	Fault, mixing valve module (KM-BUS)
bC	Fault, Vitotrol heating circuit 1 (KM-BUS)
bd	Fault, Vitotrol heating circuit 2 (KM-BUS)
bE	Fault, Vitotrol heating circuit 3 (KM-BUS)
C1	External fault indication, boiler
C5	Fault, speed controlled pump heating circuit 1 (KM-BUS)
C6	Fault, speed controlled pump heating circuit 2 (KM-BUS)
C7	Fault, speed controlled pump heating circuit 3 (KM-BUS)
C8	Fault, water level control
C9	Fault, maximum pressure
CA	Fault, minimum pressure/maximum pressure 2
Cb	Fault, maximum pressure 2
CC	Reserved, external periphery
Cd	Communication fault, Vitocom 300 (KM-BUS)
CE	Communication fault, fault indicator module (KM-BUS)
CF	Communication fault: wrong LON module
d1	Burner fault, boiler
d4	Fixed high limit fault, boiler
d5	Cascade: boiler is not responding
d6	External fault 1, plug-in adaptor
d7	External fault 2, plug-in adaptor
d8	External fault 3, plug-in adaptor
dA	Short circuit, room temperature sensor heating circuit 1
db	Short circuit, room temperature sensor heating circuit 2
dC	Short circuit, room temperature sensor heating circuit 3
dd	Interruption, room temperature sensor heating circuit 1
dE	Interruption, room temperature sensor heating circuit 2
dF	Interruption, room temperature sensor heating circuit 3
E0	Fault, external participant/device connected to LON

## Status Information

### Appendix B—Status Information


x = always available for this device

k = dependent on configuration of device

n = not available for this device

Logical Signal	Boiler Controls	Vitocontrol -S
bit 2 <sup>0</sup> : DHW tank loading pump	k	k
bit 2 <sup>1</sup> : Re-circulation pump	n	k
bit 2 <sup>2</sup> : Heating circuit pump 1	n	k
bit 2 <sup>3</sup> : Heating circuit pump 2	n	k
bit 2 <sup>4</sup> : Heating circuit pump 3	n	k
bit 2 <sup>5</sup> : Night-time contact HKP 1	n	k
bit 2 <sup>6</sup> : Night-time contact HKP 2	n	k
bit 2 <sup>7</sup> : Night-time contact HKP 3	n	k
bit 2 <sup>8</sup> : Supply pump	n	n
bit 2 <sup>9</sup> : Primary pump heat exchanger set for DHW tank loading	k	k
bit 2 <sup>10</sup> : Boiler circuit and distribution (common supply) pump	k	k
bit 2 <sup>11</sup> : Shunt pump	k	k
bit 2 <sup>12</sup> : Flue gas heat exchanger pump	x	n
bit 2 <sup>13</sup> : ThermControl switching contact	k	n
bit 2 <sup>14</sup> : Burner 1 <sup>st</sup> stage	x	n
bit 2 <sup>15</sup> : Burner fault	x	n

# Technical Information

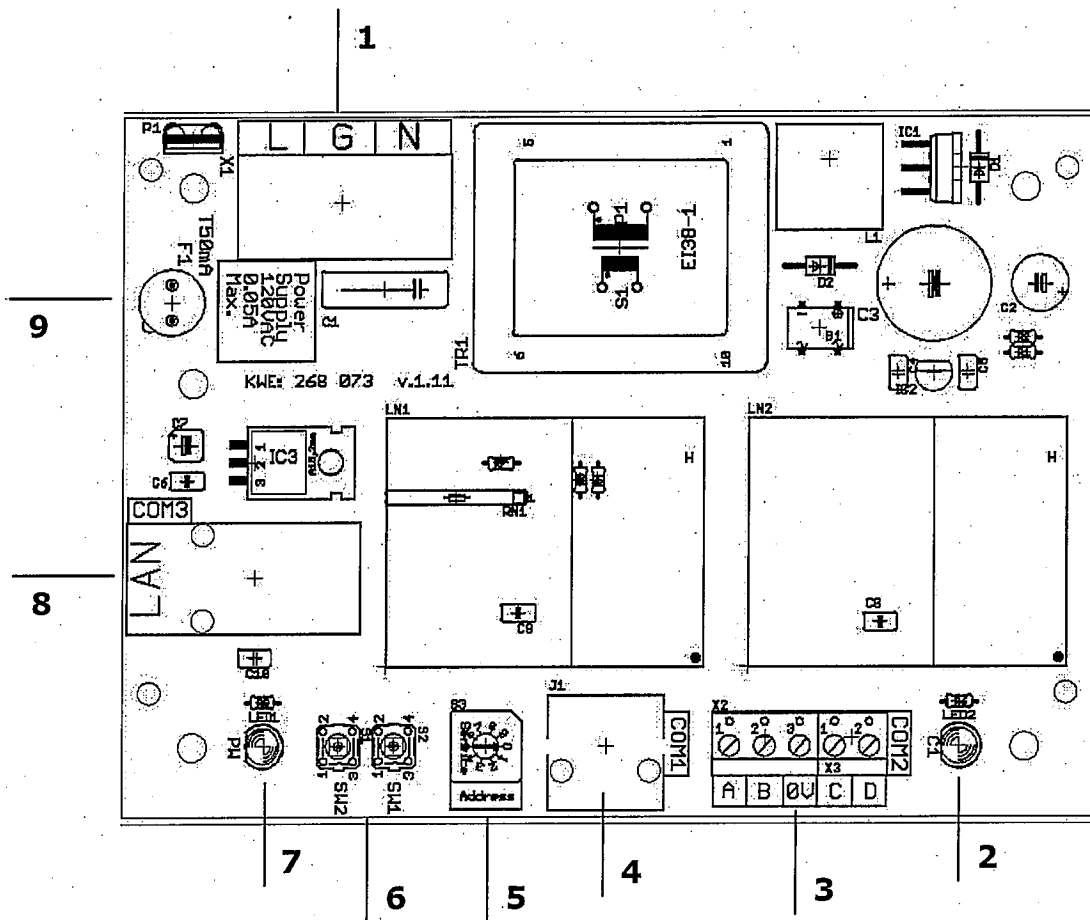

## PCB Identifiers

1	120VAC Power Supply Connections
2	Function Status LED
3	Wire connections (not used)
4	LON Communication Connections NR2 Controls
5	Addressing selector for multiple modules
6	Function buttons (not used)
7	Power LED indicator
8	BACnet IP communication connection
9	Control Fuse

## Specifications

Voltage Requirements	120VAC
Fuse Rating	50mA Time Delay
Power	4VA
Communication Connections	RJ45 to NR2 controls RJ45 to BMS



## CAUTION

Static sensitive components may be damaged by improper handling or work within the control. Ensure all possible measures are taken to eliminate build-up of static electricity.



**Notes:**

KWE P/N 542 010 Versatronik 505 NR2/BACIP Gateway V1.2.01/2009 Technical information subject to change without notice

KWE Technologies Group  
750 McMurray Road  
Waterloo, Ontario, Canada  
N2V 2G5  
Tel: (519) 747-5042  
Fax: (519) 747-4448  
[www.kwe-tech.com](http://www.kwe-tech.com)  
[info@kwe-tech.com](mailto:info@kwe-tech.com)

