

| BOM Table |             |                     |   |      |          |           |
|-----------|-------------|---------------------|---|------|----------|-----------|
| ITEM NO.  | Flow Points | PART NO             | DESCRIPTION   | QTY. | SEE NOTE | Fuel Type |
| 1         |             | 60W 10 Burner Range | Approx. Cooking Area 60Wx26D  | 1    | 8        | Gas       |
| 2         |             |                     | Appliance Dial  | 2    |          |           |
| 3         |             |                     | Nozzle location to be over front edge of the front burner and centered right to left. Aim at point 10in forward from the back burner and along the right-left center line. Nozzle height 24" to 35" above cooking area. Shelf can overhang burner(s) a maximum of 11in, and it's height can be a minimum of 20in from cooking surface | 5    |          |           |
|           |             |                     | Max Area of protection = 12x28in  |      |          |           |
| 4         |             | 423572              | Swivel Adapter  | 5    | 6        |           |
| 5         | 2           | NL2L                | Wet Nozzle Dual Flow  | 5    | 2        |           |
| 6         |             | 349H                | Link Housing Bracket  | 3    | 6        |           |
| 7         |             | AR                  | Fusible Link "ML"   | 3    | 6        |           |
| 12        |             | 132x48x24 Hood      | 132in Wide x48in Deep x24in High Wall Canopy Hood with 20x16 Duct(s)  | 1    |          |           |
| 13        | 2           | NL2D                | Wet Nozzle Dual Flow  | 1    | 2        |           |
| 14        |             | AR                  | Compression Seal  | 2    | 6        |           |
| 15        |             | AR                  | Compression Seal  | 1    | 5        |           |
| 16        | 1           | NL1H                | Wet Nozzle Single Flow  | 2    | 2        |           |
| 17        |             | MCH2                | Mechanical Control Head   | 1    |          |           |
| 18        |             | MBP2                | Mounting Bracket for Control Head   | 1    |          |           |
| 19        |             | AR                  | 1 1/2in Mechanical Gas Valve  | 1    | 6        |           |
| 20        | 5           | L1600               | 1.6 Gallon Cylinder   | 1    | 7        |           |
| 21        |             | MB15                | Cylinder Mounting Bracket   | 2    |          |           |
| 22        | 10          | L3000               | 3.0 Gallon Cylinder   | 1    | 7        |           |
| 23        |             | RPSM                | Remote Mechanical Pull Station  | 1    | 5        |           |
| 24        |             | 90KBS               | Corner Pulley   | 5    | 6        |           |


| Legend          |   |
|-----------------|---|
| Color           | Description   |
| Green           | Mounting Zones for Nozzles  |
| Blue            | Coverage Zone of Nozzle (Max coverage not Shown)  |
| Red             | Aiming Area. Aim Nozzle to Center of Target   |
| Black           | Cable Conduit   |
| Red             | Pipe for Wet Chemical   |
| Triangle with A | Revision Symbol. Refer to respective Revision for more information. Location of symbol indicates area of change |



Print provided as required by the Authority Having Jurisdiction.


IF THIS DRAWING ORIGINATED FROM HEISER LOGISTICS IT WILL CONTAIN A RAISED SEAL IN THIS AREA

| REVISIONS |      |                      |           |          |
|-----------|------|----------------------|-----------|----------|
| ZONE      | REV. | DESCRIPTION          | DATE      | INITIALS |
|           | A    | Released to Customer | 9/25/2014 | SEM      |

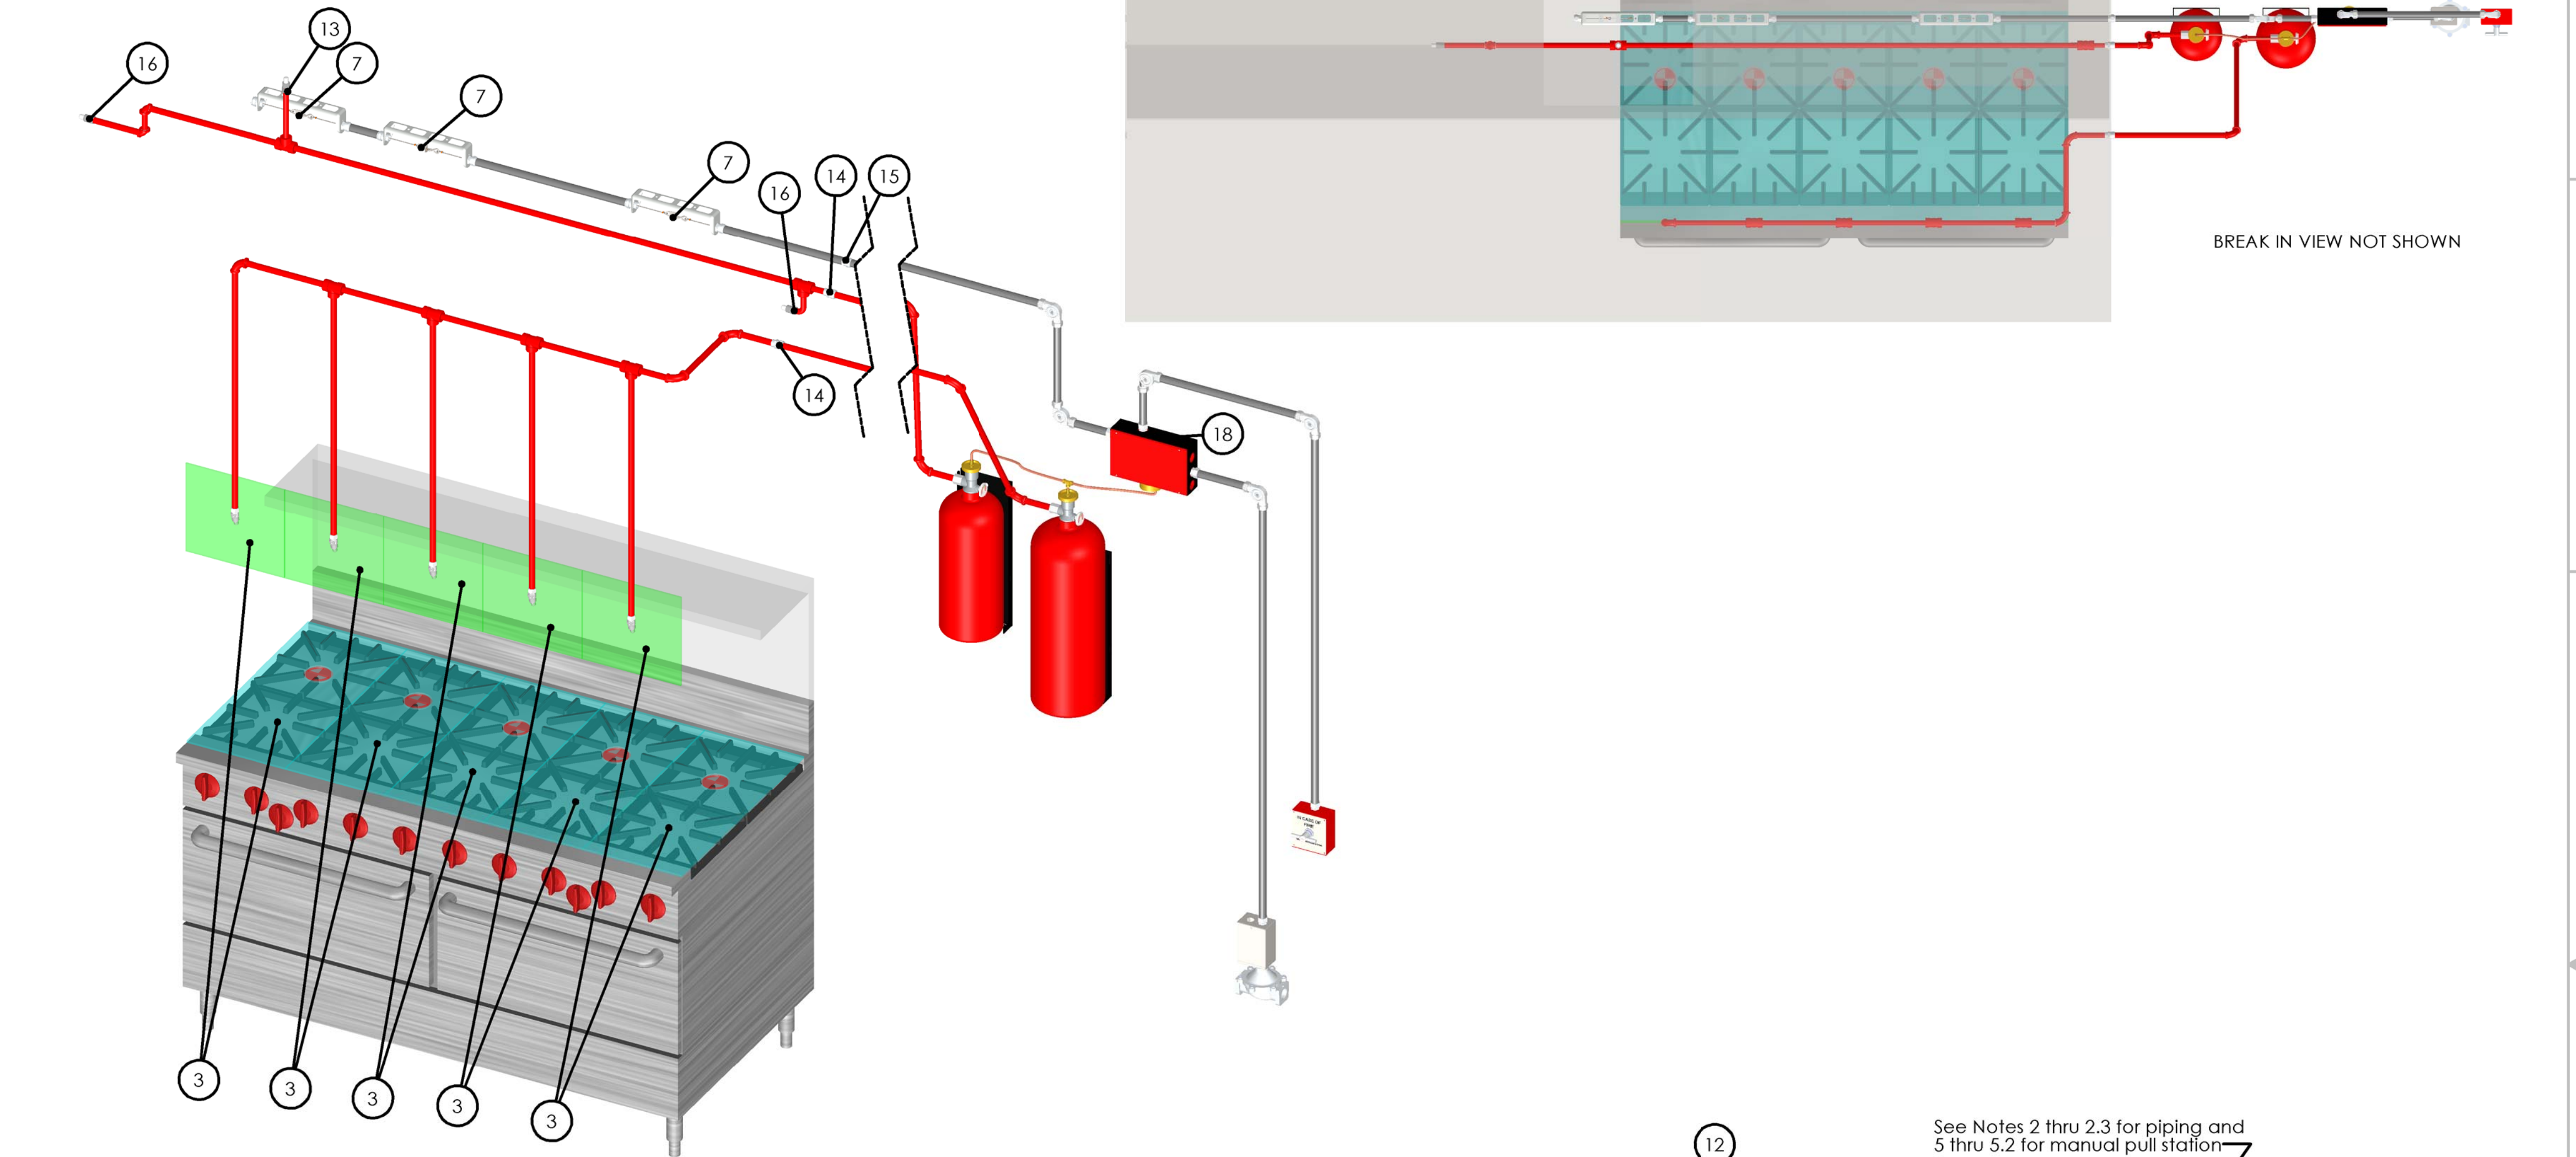

Flow Points Available 1

- Notes:
- System installation shall conform to requirements of:
    - NFPA 17A (Pre-engineered Wet Chemical Systems).
    - NFPA 96 (Ventilation Control and Fire Protection of Commercial Cooking Operations).
    - NFPA 72 (National Fire Alarm Code).
    - All applicable state, local codes and authorities having jurisdiction.
  - For more detailed information please refer to the Protex II Technical Manual on the following:
    - Piping allowances please refer to Chapter 3.
    - Nozzle positions, aiming and maximum coverages refer to Chapter 3.
    - Hood and duct coverage maximums and nozzle models refer to Chapter 3.
      - 1st hood nozzle to be located 0 to 6" from edge of hood. Maximum coverage per nozzle = 10'L x 4'W.
      - Duct nozzle to be centered in duct at 0 to 6" into opening and aimed at center of duct.
      - Duct nozzles may be modularized to protect oversized ducts.
    - Only equipment referenced in the Protex II Technical Manual or alternate suppliers components that are listed for use with the specific extinguishing system shall be used.
  - System drawing created based on information provided to Heiser Logistics.
    - Pipe routings, manual pull station and gas valve locations are not drawn to as installed specification and are shown for reference only.
    - Air handling equipment shall be deemed to be adequate by the authority having jurisdiction.
    - This plan has been produced by a person who is trained and substantially satisfies NFPA 17A, 2009 edition sections 6.1, 6.1.1, 6.2, 6.3, 6.3.1, 6.3.2, 6.3.3, 6.3.4.
  - A class K fire extinguisher shall be provided at a maximum of 30ft from the cooking area in accordance with NFPA10.
  - Manual pull station requirements:
    - Locate in the path of egress from hazard area.
    - Mount at height no more than 48" and no less than 42" from the floor.
  - Quantity shown is for reference only and AR = As Required. Individual items may be purchased as packaged kits or are available for purchase separately. Call Heiser Logistics for details 1-800-828-9638.
  - Tank(s) located (Refer to installer) from hood. Distance supplied by Installer.
  - When required to modularize protection for oversized appliances please refer to Protex II Technical Manual Chapter 3.
  - Field verification of the maximum ambient temperature must occur prior to selecting fusible link temperature(s).

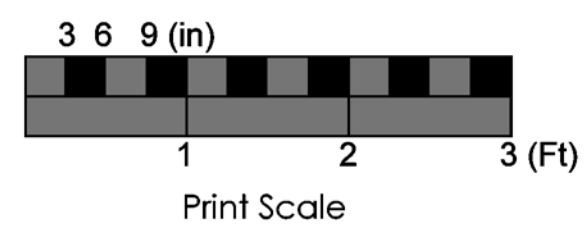

Heiser Logistics makes this document available on an "as is" basis, using information provided to it, and as a convenience to the customer. You should consult the manufacturer's manual and literature, as well as the NFPA codes and standards, for information on the construction, use and safety of the system. HEISER LOGISTICS MAKES NO REPRESENTATION OR WARRANTY REGARDING THIS DOCUMENT OR ANYTHING DEPICTED IN THIS DOCUMENT, INCLUDING ITS ACCURACY AND HEISER LOGISTICS DISCLAIMS ALL REPRESENTATIONS AND WARRANTIES, EXPRESS AND IMPLIED, WRITTEN OR ORAL, WITH RESPECT TO THIS DOCUMENT AND ANYTHING DEPICTED ON IT. HEISER LOGISTICS SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND, INCLUDING BUT NOT LIMITED TO, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, OR ANY OTHER DAMAGES, arising out of or related to the use or reliance upon this document.

INSTALLER:  
Patriot Fire Protection

DESCRIPTION:  
O'Maine Media Kitchen  
54 Danforth St, Portland, ME 04563

| NAME         | DATE      | IF ANY CONDITIONS NECESSATE SUBSTANTIAL CHANGE FROM APPROVED PLAN, AS INSTALLED PLANS SHALL BE SUBMITTED TO THE AUTHORITY HAVING JURISDICTION |
|--------------|-----------|---|
| SEM          | 9/25/2014 |   |
| CHECKED      |           |   |
| ENG APPR     |           |   |
| SHEET 1 OF 1 |           | DWG. NO. 944035   |
|              |           | REV A   |